

LIVEIT.COM

# INSTRUCTIONS

---

## ELECTRIC FIREPLACE WITH LED EFFECT LIGHTS

AGL035

AGL056

AGL060




AGL061

AGL062

AGL063

AGL064

AGL065

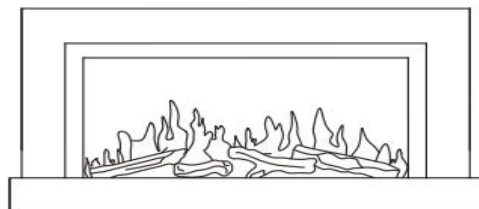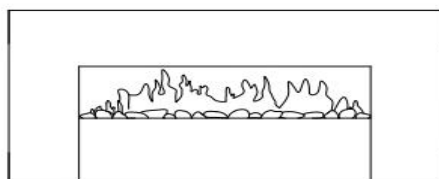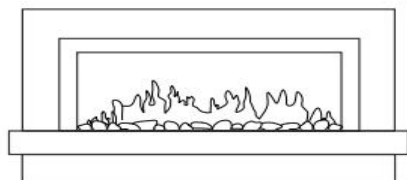

AMBERGLO

---

CALL US FOR ASSISTANCE: 0330 390 3062



# CONTENTS

|                             |    |
|-----------------------------|----|
| SAFETY INFORMATION          | 3  |
| BEFORE USE                  | 7  |
| PART SUPPLIED               | 7  |
| DIMENSIONS                  | 8  |
| STEPS TO REPLACE DECORATION | 12 |
| INSTALLATION INSTRUCTIONS   | 13 |
| OPERATION                   | 14 |
| REMOTE CONTROL              | 15 |
| DISPLAY                     | 16 |
| APP CONNECTION              | 17 |
| CARE AND MAINTENANCE        | 28 |
| TROUBLESHOOTING             | 29 |
| TECHNICAL SPECIFICATION     | 32 |
| PRODUCT FICHE               | 33 |
| SUPPORT                     | 37 |

# SAFETY INFORMATION

When using electrical appliances, basic safety precautions should always be followed, including the following:

## General

- **IMPORTANT:** Read all instructions and warnings carefully before starting installation. Failure to follow these instructions may result in a possible electric shock or fire hazard and will void the warranty.
- If the glass is damaged, do not use the heater in order to avoid a hazard.
- This electric fire is an instant heat source to warm a room and is great for visual room ambience. It does not necessarily need to be used as a constant or permanent home heating source.
- Children should be supervised to ensure that they do not play with the appliance.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children of less than 3 years should be kept away unless continuously supervised.
- Children aged from 3 years and less than 8 years shall only switch the appliance on or off provided that it has been placed or installed in its intended normal operating position and they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children aged from 3 years and less than 8 years shall not plug in, regulate, clean or perform user maintenance on the appliance.
- Before connecting the appliance, be sure that the mains voltage available matches that specified on the rating label and that the outlet is suitably earthed.
- The fire should be tested before installation.
- To disconnect the appliance, switch the controls off and then remove the plug from the socket outlet.
- This fireplace becomes hot during operation. To avoid burns, do not allow bare skin to touch hot surfaces.
- Two people should be sufficient to lift the heater. If, for any reason, it is considered too heavy, then obtain additional assistance.
- When lifting, always keep your back straight. Bend your legs and not your back.
- Avoid twisting at the waist. It is better to reposition your feet.
- Avoid upper-body/top-heavy bending. Always bend from the knees rather than the waist.

- Do not lean forward or sideways while handling the heater.
- Always grip with the palm. Do not use the tips of your fingers for support.
- Always keep the heater as close to the body as possible. This will minimise the cantilever action.
- If required, use gloves to provide additional grip.
- Always use assistance if required.

## Placement and installation

- **CAUTION:** Some parts of this product can become very hot and cause burns. Particular attention must be given where children and vulnerable persons are present.
- **IMPORTANT:** This heater must be earthed. The mains supply must be safely routed to an electrical socket from the heater.
- This appliance has hot, arcing, or sparking parts inside. Do not use it in areas where petrol, paint, or other flammable liquids are used or stored.
- The appliance must be installed in a location that complies with national regulations concerning the discharge of air.
- Do not cut, notch or damage any joist, beam or rafter when installing the appliance.
- The heater must not be located immediately below a socket outlet.
- Ensure the plug remains accessible after installation to disconnect the unit from the power supply.
- This appliance is designed for indoor use only and is not intended for use in bathrooms, laundry areas or similar locations. Never locate the appliance where it may be exposed to water or excessive moisture.
- If a television or other electrical device is installed above this fireplace, installers must ensure that the ambient temperature around the television does not exceed the manufacturer's recommendations.
- We always recommend employing an experienced, qualified installer when fitting such products. Each installation will vary, and specialist expertise is often required to conduct the necessary building work. The manufacturer accepts no responsibility or liability for poor workmanship or incorrectly installed fires and/or fireplaces.
- Avoid the use of an extension lead, as it may overheat and create a fire hazard.
- Do not run the power cable under carpeting, cover it with rugs, runners or similar floor coverings, and ensure it is kept away from traffic areas where it could create a trip hazard.
- The heater must not be located under an electrical socket; the socket must always be accessible in order to disconnect the heater from the electrical supply for maintenance and cleaning.

# Use

- **WARNING:** In order to avoid overheating, do not cover the heater.
- **CAUTION:** To avoid a hazard caused by the inadvertent resetting of the thermal cut-out, this appliance must not be supplied through an external switching device, such as a timer, or connected to a circuit that is regularly switched on and off by the user or utility.
- Do not use the appliance for anything other than its intended use. It is designed for domestic indoor use only.
- There may be a trace of odour during the first few minutes of initial use or after a storage period. This is normal and will quickly disappear.
- Keep combustible materials such as furniture, pillows, bedding, paper, clothing and curtains at least 1 metre from the appliance.
- This appliance should not be used to dry clothing, nor should Christmas stockings or decorations be hung on or near it.

## Cleaning and maintenance


- Do not attempt to repair, disassemble or modify the appliance. This unit contains no user-serviceable parts.
- Always unplug or disconnect the appliance from the mains power supply when not in use or when moving or cleaning it. Do not pull the cord to unplug the heater.
- Clean the fire regularly to prevent the build-up of hair, dust or lint that could enter the appliance and cause a blockage.
- Do not use aerosol sprays or steam cleaners on or around the fire.
- If the supply cord is damaged, it must be replaced by the manufacturer, service agent or a similarly qualified person in order to avoid a hazard.
- In the event that the mains plug has to be removed or replaced for any reason. NOTE: The wires in the mains lead on this appliance are coloured in accordance with the following code:

Green and Yellow - Earth

Blue - Neutral

Brown - Live

If the wires do not match the colour coding above, please follow the instructions below.

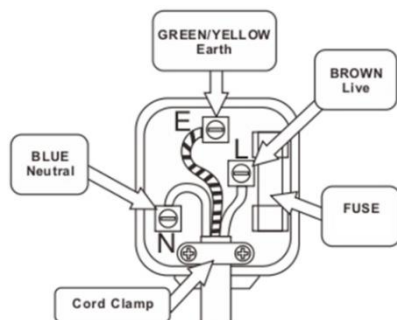

- The green and yellow wires must be connected to the terminal, which is marked with the letter E or with the earth symbol. This colouring will not change.
- The blue wire may be black and must be connected to the terminal marked N.
- The brown wire may be red and must be connected to the terminal marked L.

**IMPORTANT:** Any cut-off plug should be disposed of safely to prevent a hazard. There is a danger of electric shock if a cut-off plug is inserted into a socket outlet.


This appliance is supplied with a BS1363 3-pin plug fitted with a 10-amp fuse. If the fuse requires replacement, it must be replaced with a 10-amp fuse approved to BS1362.



THIS SYMBOL MEANS DO NOT COVER IN ORDER TO AVOID OVERHEATING. DO NOT COVER OR OBSTRUCT ANY OF THE HEAT OUTLET GRILLES OR AIR INTAKE OPENINGS OF THE HEATER.

# BEFORE USE

Before using the appliance for the first time, ensure that it has been fully unpacked and that all packaging has been disposed of properly to ensure it does not present a risk to children or animals.

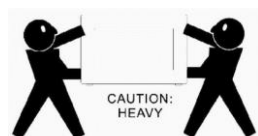

Due to the size and weight of the fire, we advise that two people carry out the installation to prevent injury or damage.


## RF EXPOSURE GUIDELINES

**IMPORTANT!** To meet RF (Radiofrequency) exposure requirements:


1. A minimum separation distance of 20 cm must be maintained between the device and individuals during operation.
2. Operating the device closer than this distance is not recommended.
3. The antenna used for this transmitter must not be co-located or operated in conjunction with any other antenna or transmitter.

# PARTS SUPPLIED


**PLEASE NOTE:** Some parts are packaged within the cavity of the surround on the rear of the fire.

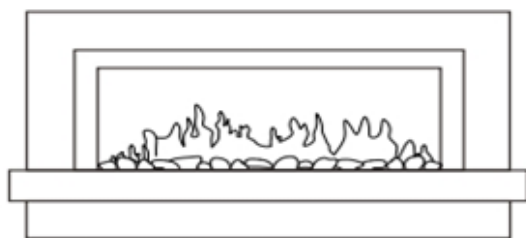

Fireplace

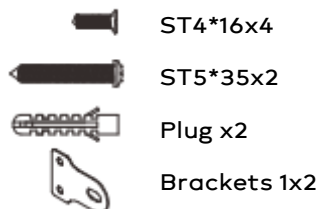


Remote
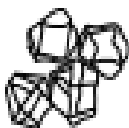
| SKU    |  |  |  |  |
|--------|-----------------------------------------------------------------------------------|-----------------------------------------------------------------------------------|-----------------------------------------------------------------------------------|------------------------------------------------------------------------------------|
|        | 0.9Kg Pebbles                                                                     | 0.5Kg Crystals                                                                    | 4 x Logs                                                                          | 7 x Logs                                                                           |
| AGL035 | ✓                                                                                 | ✓                                                                                 | X                                                                                 | X                                                                                  |
| AGL056 | ✓ (1.3kg)                                                                         | ✓ (0.9kg)                                                                         | X                                                                                 | X                                                                                  |
| AGL060 | ✓ (3.1kg)                                                                         | X                                                                                 | X                                                                                 | X                                                                                  |
| AGL061 | ✓                                                                                 | ✓                                                                                 | ✓                                                                                 | X                                                                                  |
| AGL062 | ✓ (1.3kg)                                                                         | ✓ (0.9kg)                                                                         | X                                                                                 | ✓                                                                                  |
| AGL063 | X                                                                                 | X                                                                                 | X (Fixed)                                                                         | X                                                                                  |
| AGL064 | ✓                                                                                 | ✓ (0.9kg)                                                                         | ✓                                                                                 | X                                                                                  |
| AGL065 | ✓                                                                                 | ✓ (0.5kg)                                                                         | ✓                                                                                 | X                                                                                  |


## DIMENSIONS

NOTE: all dimensions are in mm

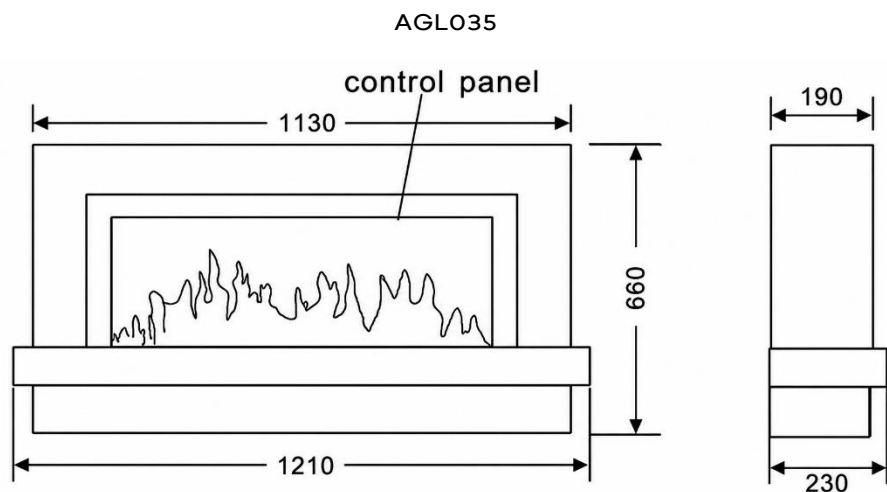





AGL056

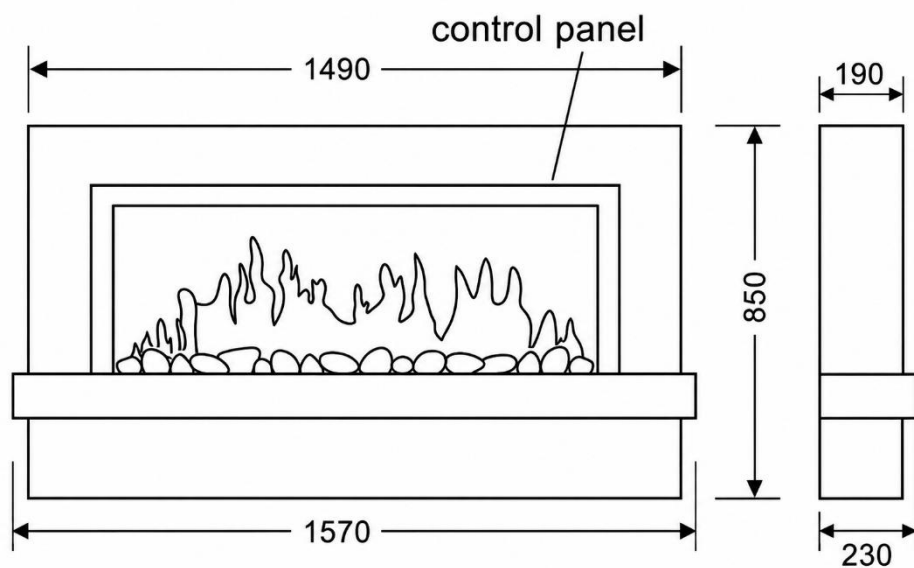


AGL060

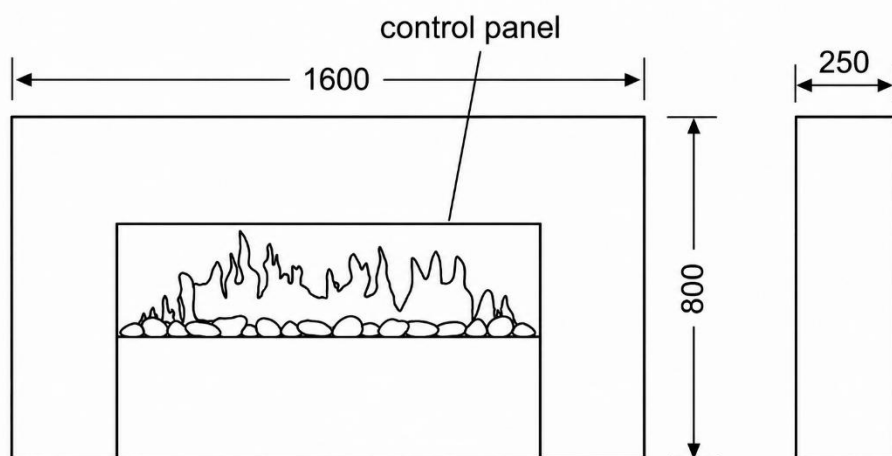


AGL061

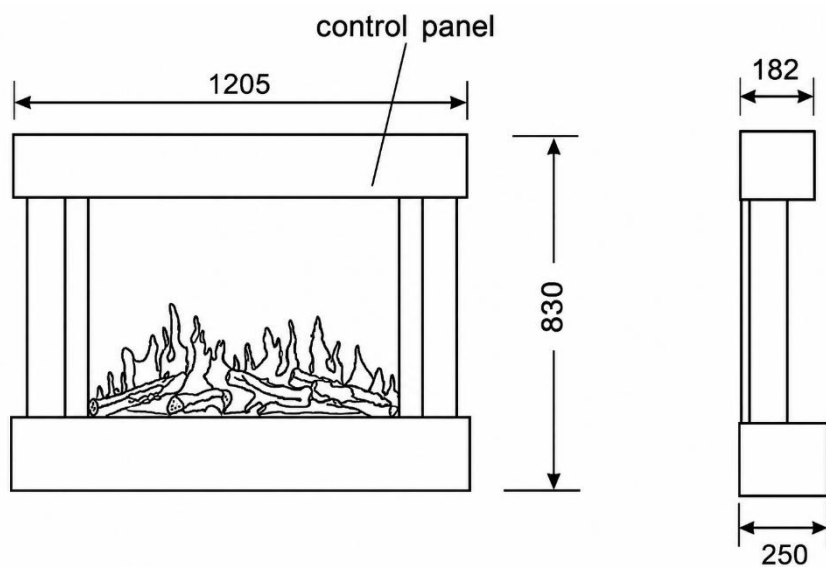

AGL063

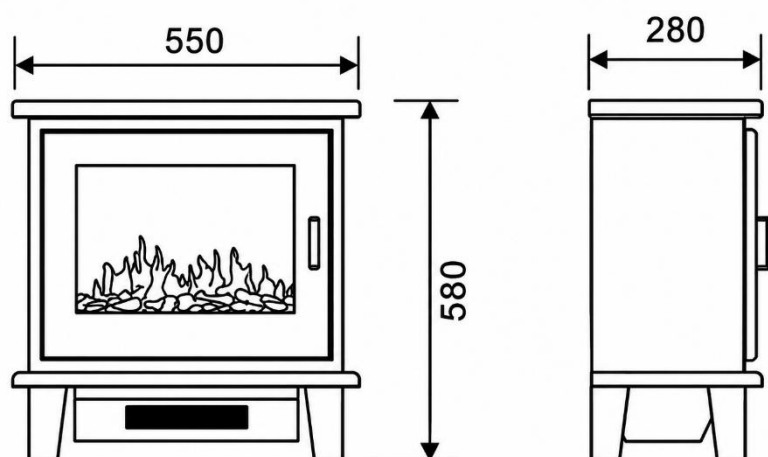


AGL064 and AGL065

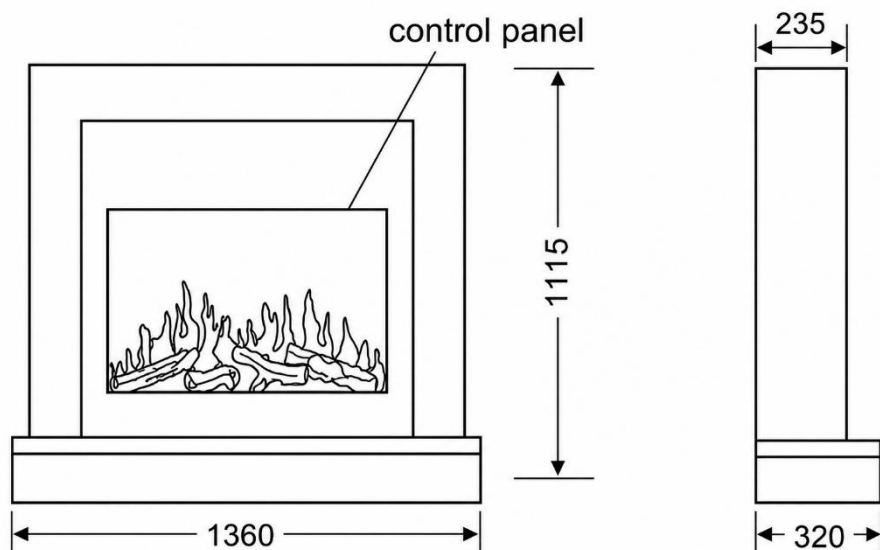

# STEPS TO REPLACE DECORATION (FOR AGL035 & AGL061)

1. Remove the two screws with a Phillips screwdriver.
2. Take off the glass, then put any decorations in the well (small pebble/crystal/log set supplied)
3. Install the glass carefully.


Two holes are provided for the screws for extra security.

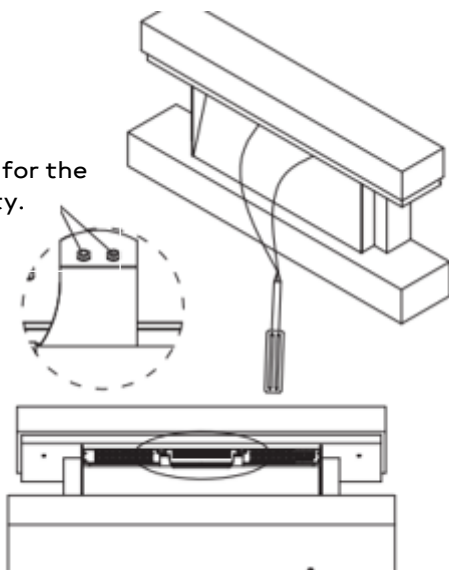


# INSTALLATION INSTRUCTIONS

**IMPORTANT!** Two people are needed for wall installation.

1. Fix the Brackets with ST4\*16 screws on the top left and right sides of the back of the unit.
2. Measure the distance between the two brackets using a tape measure. Place the tape measure against the wall and use a pencil to mark where the two brackets will be located. Then, using an M8 drill bit, drill holes in the wall and insert the wall plugs.
3. Then use ST5\*35 screws to fix the product through the brackets.

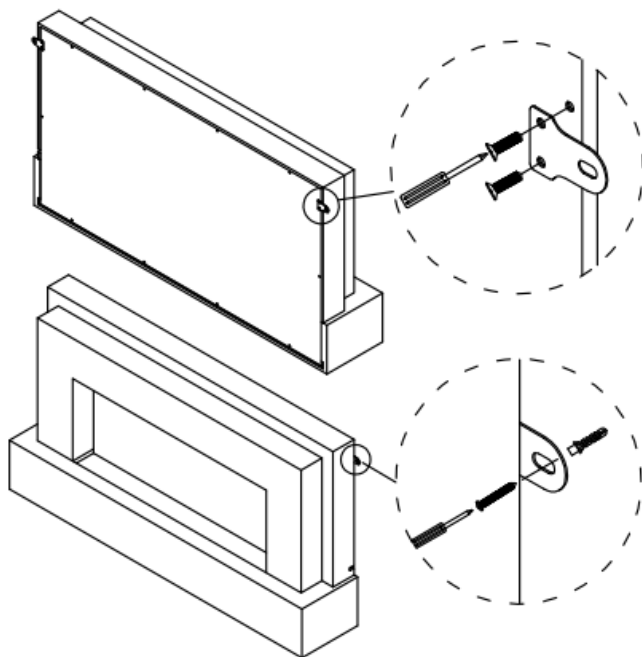

# OPERATION

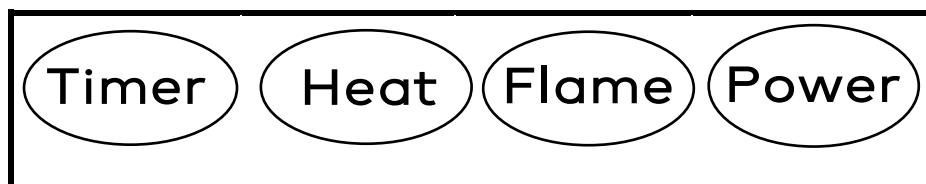


|                 |                                                                                                                                                                                                                                                                                                                                                                                                                                   |
|-----------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| ON/OFF          | <p>Press the power button to turn the unit on or off. In standby mode, press and hold the power button for 3 seconds to set the wireless network (see Wi-Fi connection).</p> <p>Press and hold the power button for 5 seconds in standby mode to toggle between Celsius and Fahrenheit.</p>                                                                                                                                       |
| FLAME CONTROL   | <p>Press the flame button rapidly to adjust the flame brightness. There are five levels, with five being the brightest and one the dimmest.</p> <p>Press and hold the flame button for 5 seconds to enter the flame colour settings. You can choose between the colours:</p> <p>C1 Warm white + Red + Blue.<br/> C2 Warm white + Red<br/> C3 Red + Blue<br/> C4 Warm white + Blue<br/> C5 Blue<br/> C6 Red<br/> C7 Warm white</p> |
| HEAT CONTROLLER | <p>Press the heat button repeatedly to change the heat level. The heat level is indicated on the display by a bar. A small bar means the heat is LOW, and a large bar means the heat is HIGH. Press and hold the heat button to set the temperature between 18 and 35°C.</p>                                                                                                                                                      |

|              |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |
|--------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <p>TIMER</p> | <p>You can set 0-9 hours in 1-hour increments. As soon as the time you set has elapsed, the fire will automatically go out. To adjust the timer, you will hear a beep and "F1" will be displayed on the screen. Then, press the timer button repeatedly to select one of the colours. Once you reach "F9", the setting mode is exited, and the colour selection starts again.</p> <p>FO Turn off the spotlight</p> <p>F1 Red</p> <p>F2 Green</p> <p>F3 Blue</p> <p>F4 Red + Blue</p> <p>F5 Red + Green</p> <p>F6 Blue + Green</p> <p>F7 White</p> <p>F8 Orange</p> <p>F9 Gradual change (from F1 to F8)</p> |
|--------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|


## REMOTE CONTROL

|                                                                                                         |                                                                                                                                                                                                                                                                                                                                          |
|---------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <p>Power Button</p>    | <p>When the unit is in standby mode, press once to turn on and again to turn off. You can also hold this for 3 seconds to reset the Wi-Fi connection.</p> <p>Whilst the unit is in startup mode, hold for 5 seconds to switch between C and F.</p>                                                                                       |
| <p>Flame Button</p>  | <p>To adjust the flame brightness, press the Flame button once, then use the Arrow buttons to cycle through 5 brightness levels, with Level 5 being the brightest and Level 1 the dimmest.</p> <p>To change the flame colour, press the Flame button twice, then use the Arrow buttons to select from flame colour options C1 to C7.</p> |

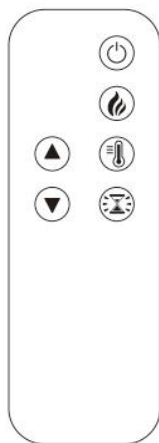


|                                                                                                                                                                                          |                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |
|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <p>Arrow Buttons</p>   | <p>Press these buttons to select between the different heating levels. The level you select is shown on the heat indicator. When the small bar lights up, a low heating level is set. When both bars are lit, a high heating level is set.</p>                                                                                                                                                                                                                                |
| <p>Temperature Button</p>                                                                               | <p>Press this button once and use the arrow buttons to select the desired temperature (18-35°C).</p>                                                                                                                                                                                                                                                                                                                                                                          |
| <p>Timer On / Off</p>                                                                                   | <p>Press this button while the unit is on to set the time until it switches off automatically. You can set 0-9 hours in 1-hour increments. As soon as the time you set has elapsed, the fire will automatically go out. To adjust the timer, you will hear a beep and "F1" will be displayed on the screen. Then, press the timer button repeatedly to select one of the colours. Once you reach "F9", the setting mode is exited, and the colour selection starts again.</p> |

## DISPLAY

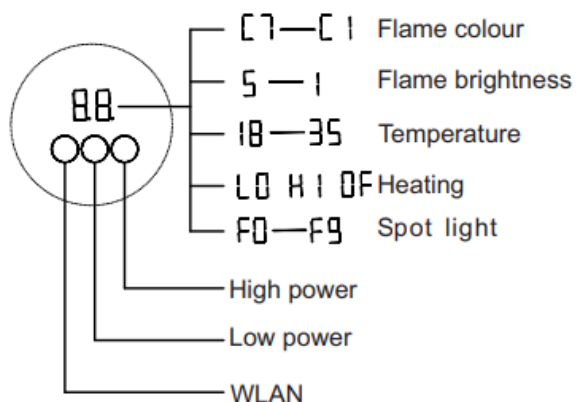



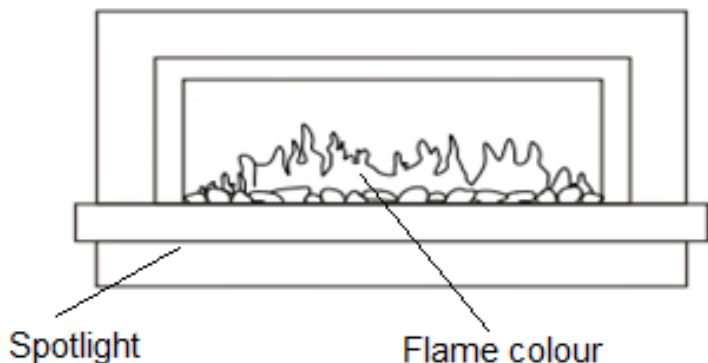

## APP SET UP

NOTE: The images in this manual are for illustration purposes only. The app is subject to updates, and its interface may change over time.

There are three ways to download the Tuya Smart app:

1. Open your phone browser and go to [smartapp.tuya.com/tuyasmart](https://smartapp.tuya.com/tuyasmart). Select your country and press Download.
2. Search for Tuya Smart in the Apple App Store (iOS) or Google Play Store (Android). Look for the QR icon for reference.
3. Scan the following QR code to be directed to the download page.



### REGISTERING ON THE APP

1. Open the app, read the User Agreement & Privacy Policy, and press Agree.
2. On the login screen, select Sign Up.
3. Select your country and enter your email address.
4. Tick the box to agree to the terms and conditions.
5. Press Get Verification Code.
6. Check your email inbox and enter the six-digit code in the app.
7. Set a password (6 to 20 characters, including letters and numbers).
8. Select or deselect Service Maintenance & Improvement Activity and Personalised Recommendations based on your preference.
9. Press Go to App. You will now be taken to the Tuya Smart home screen.

NOTE: After signing in to the Tuya Smart app for the first time, a pop-up message may appear on the home screen. Follow the on-screen instructions to enable or access additional features on the home screen.

## SETTING UP THE WI-FI (2.4GHZ CONNECTION)

NOTE: If you are unsure about your router settings, contact your internet provider for assistance.

To connect the unit via Wi-Fi, ensure your router supports dual-band Wi-Fi (2.4GHz and 5GHz) and that the 2.4GHz band is available. You can check this in one of the following ways:

1. If your router already has a 2.4GHz network, temporarily disable the 5GHz band while setting up the unit. You may re-enable it after setup.
2. If your router does not have a separate 2.4GHz network, enable it through your router settings:
  - Open a web browser and enter your router's IP address (found on the back of your router).
  - Log in to your router settings and look for Wi-Fi or network settings.
  - Follow your provider's instructions to enable 2.4GHz Wi-Fi.
3. Alternatively, contact your internet provider to assist with enabling 2.4GHz Wi-Fi.

Once the 2.4GHz network is enabled, connect your phone to it before setting up the unit.


### Before you start

- Ensure the unit is within range of the router during initial setup.
- Ensure the unit remains within range of the Wi-Fi signal for normal operation.
- Please note that all app images and diagrams are solely for illustrative purposes, as they are subject to continual improvement and further updates.


## SETTING UP YOUR HOME WITHIN THE APP

TUYA is designed to work with many compatible smart devices within your home and multiple devices within different houses. As such, during the setup process, the app requires that different areas be created and named to allow easy management of all your devices. When added, devices are assigned to one of the rooms you created.

### TO CREATE A HOME

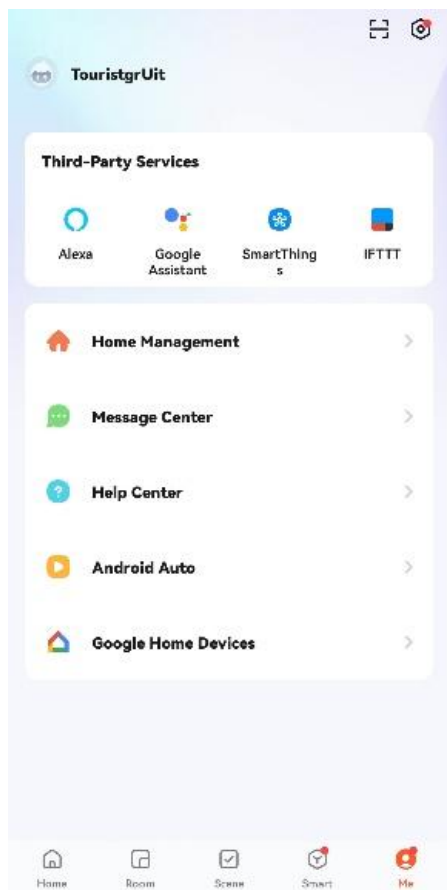


1. Press Me on the bottom right of the Home screen.
2. Press Home Management, then Create a Home button.
3. Type in a name for your home
4. Press the location button to select the location of your home. (See SETTING YOUR LOCATION below)
5. New rooms can be added by pressing the Add another room option at the bottom.
6. Untick any rooms that are not required on the app.
7. Press Save in the top right corner.

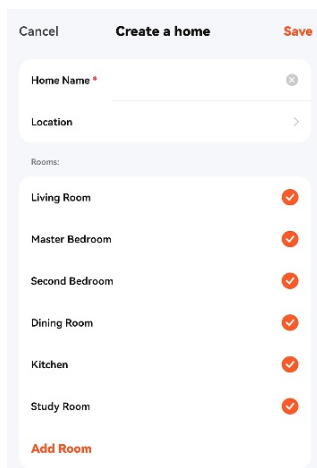


## SETTING YOUR LOCATION

Use your finger to move the orange Home symbol. When the symbol is in the approximate location of your home, press the confirm button in the top right corner.

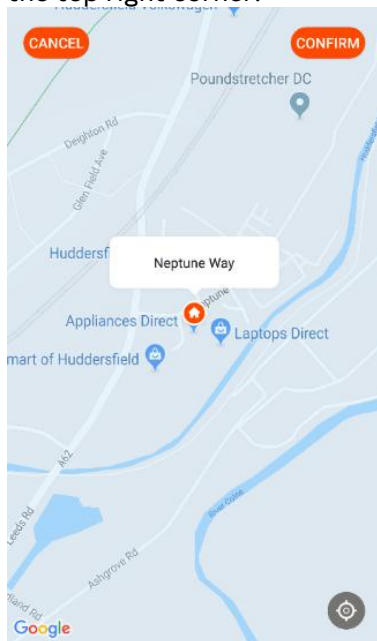

## ADD ANOTHER ROOM

Type in the room's name, and press Done in the top right corner.

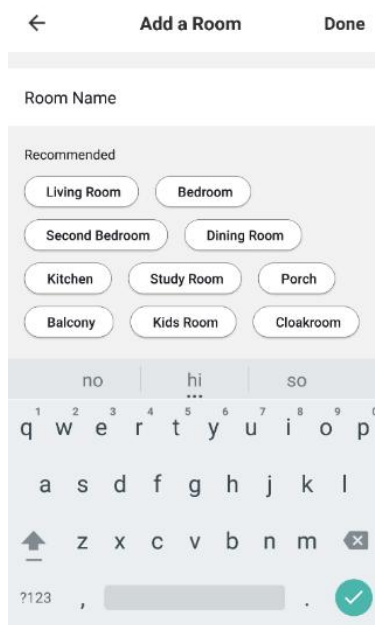

# CONNECTING TO THE UNIT


1. Turn the fire on using the power button. Hold down the Wi-Fi button for 3 seconds to turn the Wi-Fi on.



2. Press the Wi-Fi button to turn the intelligent control on.



3. On the app, now select the 'Add' button in the top corner. Then, "Add Device".

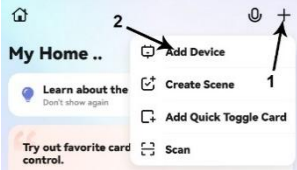

4. Ensure your phone is connected to the same Wi-Fi as the unit. Then select 'Small Home Appliances', then electric fires.



5. Press "Confirm the indicator is blinking on the app" if it is, and press next. If the indicator does not blink, return to step 1.

Wi-Fi Mode

Reset the device



Press and hold the RESET button for 5 seconds until the indicator blinks (subject to the user manual).

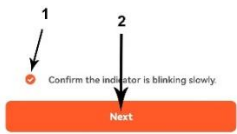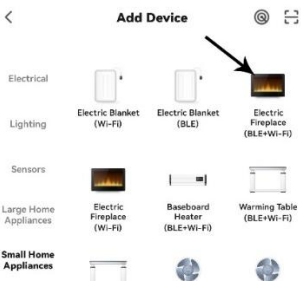


Reset Device Step by Step


6. Enter your Wi-Fi password and then wait for the transfer of the settings to be completed.

Select 2.4 GHz Wi-Fi Network and enter password.

 If your Wi-Fi is 5GHz, please set it to be 2.4GHz. Common router setting method



CONTROLLING THE DEVICE VIA THE APP  
HOME SCREEN

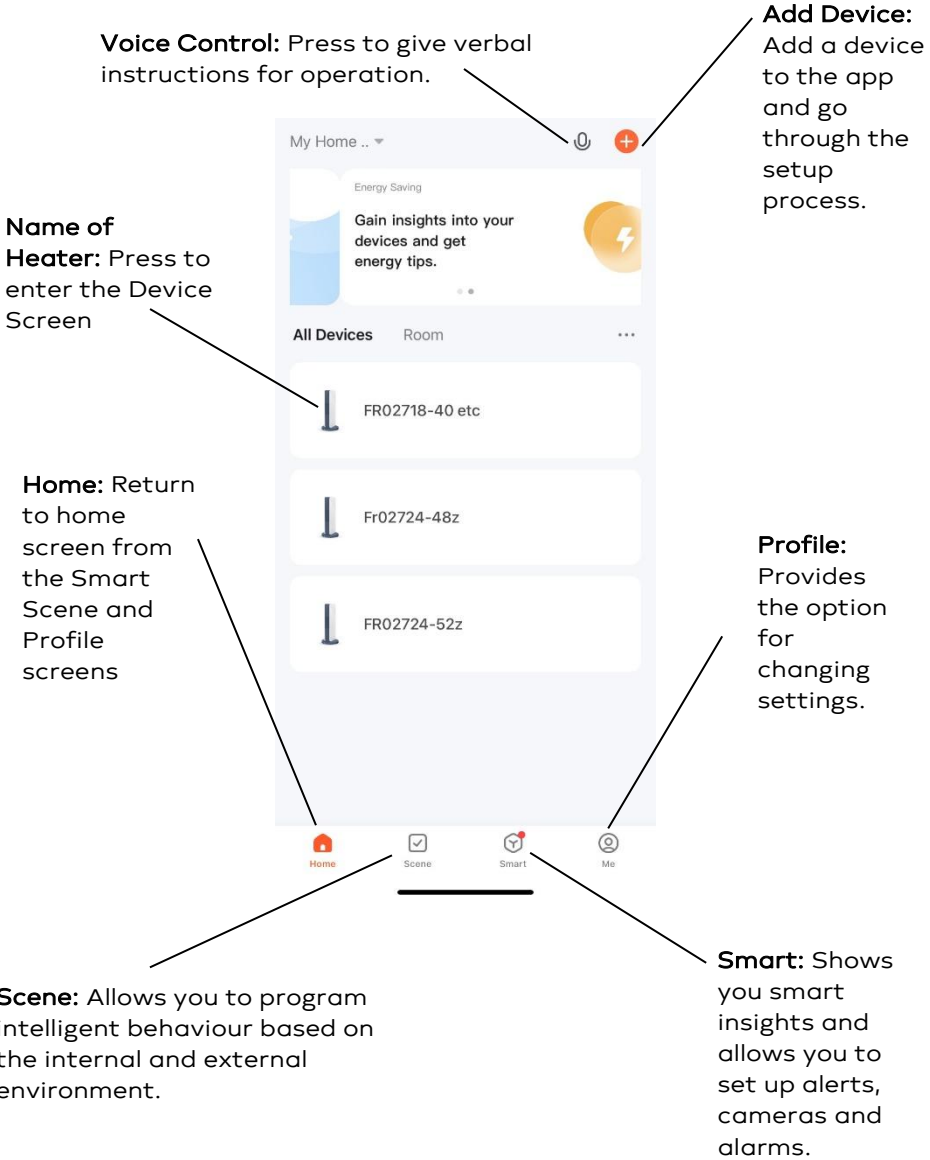

DEVICE SCREEN

**Back:** Returns to the Home Screen

**Device Name**

**Edit Device Name**

The diagram shows a mobile app interface for a smart thermostat. At the top, there is a header bar with a back arrow on the left, the device name 'fro2718 media-vdevo' in the center, and an edit icon on the right. The main display area features a large circular temperature gauge. The gauge has a white needle pointing to '12' with a degree Celsius symbol. Below the gauge, it says 'Current Temperature -20°C'. To the left of the gauge, there is a minus sign button labeled 'Decrease Desired Temperature' with a note 'Temperature range 15-40°C'. To the right, there is a plus sign button labeled 'Increase Desired Temperature' with a note 'Temperature range 15-40°C'. Below these buttons is a 'Set Temperature' label. At the bottom of the screen, there is a 'Switch' button (power icon) and a 'Settings' button (gear icon). Arrows point from text labels to each of these elements.

**Desired Temperature:** Displays what has been set as the target room temperature.

**Current Temperature:** Displays what the current temperature is.

**Decrease Desired Temperature**  
Temperature range 15-40°C

**Increase Desired Temperature**  
Temperature range 15-40°C

**Settings:** Enter the settings menu. You can access the temperature scale, flame brightness, downlights, colour, and the timer schedule.

**Power:** Use to turn the unit on or off.

## DEVICE SETTINGS

**HEAT:** To turn the heat on or off.

**FLAME COLOUR:** Click to change the flame colour.

**BACKLIGHT COLOUR:** Click to change the backlight colour,

**FLAME BRIGHTNESS:** Change the flame brightness or turn the flames on or off.

**OPEN WINDOWS:** Turn on open window detection.

**TIMER:** Schedule a timer to turn the device on or off.

### ADDING A TIMER:

Click add.


Select the time you want the device to turn on or off.

Select 'Repeat' if you would like this to be scheduled for certain days.

You can add a note to name the schedule.

Click 'Switch' to choose if the schedule is to turn on or off the device.

Then click save.

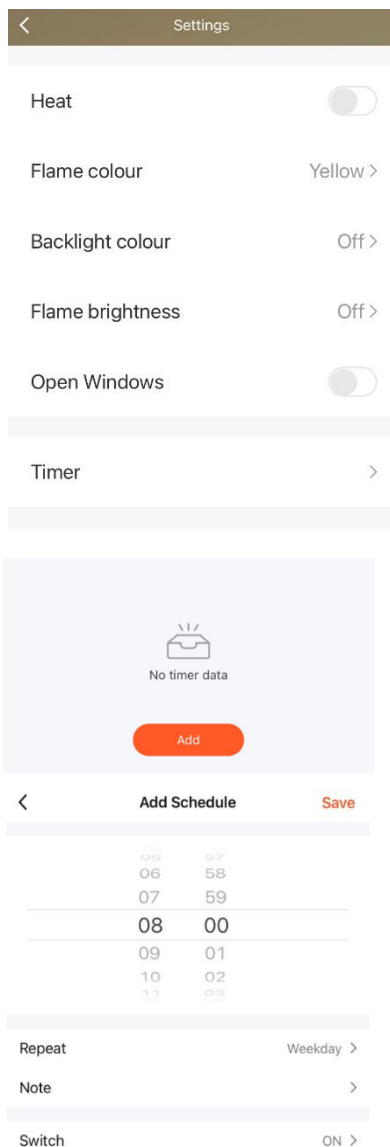



## SMART SCENES


Smart Scenes is a powerful tool that allows the user to customise the operation of the air heater based on conditions within the room and outside influences. This gives the user the option of specifying much more intelligent actions. These are split into two categories: Scene and Automation.

### SCENE

The scene allows you to add a one-touch button to the Home Screen. The button can be used to change several settings in one go, and all the unit settings. Several scenes can easily be set up, allowing the user to easily change between several pre-set configurations.

### AUTOMATION

Automation allows an automatic action to be set up for the device. This can be triggered by the Time and various other influences, depending on what other TUYA-enabled devices you have on the network.

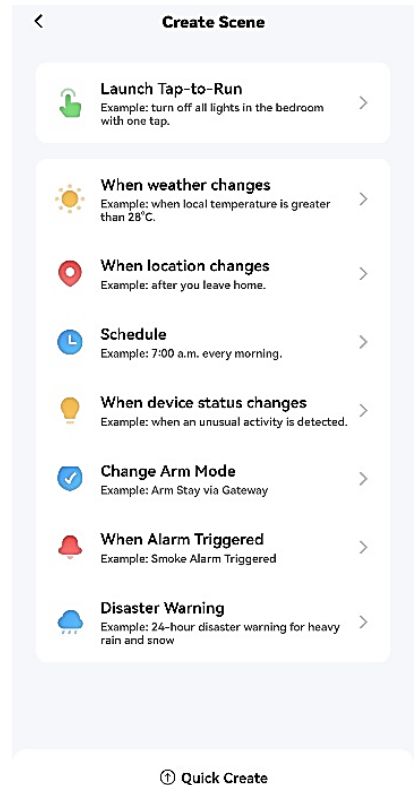

## SETTING UP A SCENE / AUTOMATION

1. Press the Scene button at the bottom of the home screen.
2. Press the Create Scene button or the + icon at the top right corner.
3. Select a scene or automation based on the several options available:

[S=Scene, A=Automation]

|   |                                |                                                                                                    |
|---|--------------------------------|----------------------------------------------------------------------------------------------------|
| S | Launch Tap-to-Run              | Manually activate a scene with one tap.                                                            |
| A | When Weather Changes           | Trigger actions based on temperature, humidity, or weather (e.g. rain, snow).                      |
| A | When Location Changes          | Automate devices when arriving at or leaving a location.                                           |
| A | Schedule                       | Run actions at specific times or days (e.g. 7:00 AM daily).                                        |
| A | When the Device Status Changes | Trigger actions when another device changes state (e.g., the heater turns on when the door opens). |
| A | Change Arm Mode                | Automatically change security system mode (Arm, Disarm, Stay).                                     |
| A | When Alarm Triggered           | Activate actions when a device alarm goes off (e.g. smoke alarm).                                  |
| A | Disaster Warning               | Trigger scenes in response to government-issued weather alerts.                                    |

4. When creating a scene or automation (except for "Launch Tap-to-Run"), you'll need to set a precondition and define the action to be performed when that condition is met. Actions can include changing the arm mode, switching the appliance on or off, adjusting the temperature, changing the operating mode, enabling or disabling the child lock (if available), activating another scene, sending a notification, or adding a delayed action. You will also need to select the specific appliance that the scene will control.

NOTE: The "more settings" button allows you to customise the icon for the scene or automation and the room to which you would like this to apply.

5. Once you have the precondition (If), the function to perform for the selected appliance (Then), and your preferred settings, press the save button, name your Scene or Automation, and confirm.

NOTE: Some functions and features under Smart Scenes and Automation may not be available. The application is subject to continual improvement and development.

## PROFILE TAB

### THIRD-PARTY SERVICES

Integrate your devices with voice assistants and automation services for hands-free control and smart scheduling.

Alexa / Google Assistant / SmartThings / IFTTT

These options let you link your Tuya-compatible devices to third-party platforms for voice commands, routines, or advanced automation workflows.

### HOME MANAGEMENT

Allows you to manage your Tuya smart home environment.

- Create and customise homes
- Add or remove rooms
- Share control of devices with family members or housemates

### MESSAGE CENTER


Shows system and device notifications.

- View alerts from smart devices (e.g., if an alarm is triggered)
- See activity logs or system messages related to your setup

### HELP CENTER

Offers FAQs and basic troubleshooting support.

- Browse frequently asked questions
- Learn how to use features or solve common problems
- Find contact options for support (depending on region)

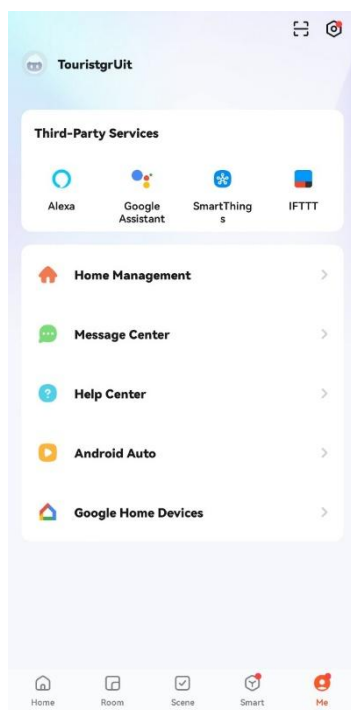

# CARE AND MAINTENANCE

When cleaning the appliance, the power should be disconnected, and the unit should be cool.

Dust can be removed by lightly wiping the glass surface with a clean, lint-free cloth or paper towel. Fingerprints or other marks can be removed using a damp cloth and a good-quality household glass cleaner. The front glass panel should be thoroughly dried before reusing the heater.



## CAUTION:

- Do not use an abrasive cleaner on the glass panels.
- Do not spray liquids directly onto any surface of the unit.
- Do not clean the glass on the inside of the unit, as this may cause damage to the surface.
- The decorative logs may leave a residue on the fuel bed; this is normal and can be cleaned with a soft, damp cloth. Ensure the fire is cool and turned off before cleaning the fuel bed. Ensure any water residue from cleaning has dried before using the fire.

## SERVICING


A competent person must conduct any servicing or repairs after reading the service manual. Customer service can provide the service manual by emailing [Support@liveit.com](mailto:Support@liveit.com).

## REPLACING THE BATTERIES

The batteries are not included with your remote. You will need 2x AAA 1.5 V batteries.

To insert the batteries:

1. Push the tab down towards the bottom of the remote to unclick the cover, then remove it.
2. Insert the batteries following the polarities on them and the remote.
3. Slide the tab for the cover into the remote and click back into place.

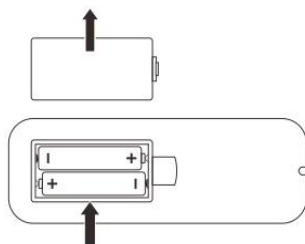

**NOTE:** The batteries are not included with your remote

# TROUBLESHOOTING

Most problems are simple to resolve - please refer to the following table before calling a service engineer:

| PROBLEM                                                  | POSSIBLE CAUSE                                                                                               | CHECK                                                                                                                                                                                                            |
|----------------------------------------------------------|--------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| The fire has stopped working.                            | The fire has overheated, and the thermal safety device has been activated, or a circuit breaker has tripped. | Check that there is power to the socket where the fire is connected, check the fuse in the plug, check that the main power switch on the unit is turned on, and leave for 10 minutes in case of thermal cut-out. |
| The flame is not moving.                                 | Flame motor defective                                                                                        | Contact the retailer or manufacturer.                                                                                                                                                                            |
| The fan is still running when the heating is turned off. | The fan runs for 30 seconds before stopping once the heat has been turned off. This is normal.               |                                                                                                                                                                                                                  |

## WI-FI CONNECTION TROUBLESHOOTING (TUYA SMART APP)

If you experience difficulties connecting your device to the Tuya Smart app, refer to the table below for common issues and solutions.

| ISSUE                         | POSSIBLE CAUSE                                                                                                                                                                                      | POSSIBLE SOLUTION                                                                                                                                                                                                                                                                                                                                                                       |
|-------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Device not found during setup | <ul style="list-style-type: none"><li>• The appliance is too far from the router.</li><li>• The mobile phone is connected to a 5GHz network.</li><li>• Wi-Fi interference or weak signal.</li></ul> | <ul style="list-style-type: none"><li>• Ensure your phone is connected to a 2.4GHz Wi-Fi network.</li><li>• Place the appliance closer to the router during setup.</li><li>• Restart your router and phone before retrying.</li></ul>                                                                                                                                                   |
| Wi-Fi indicator not blinking  | Device is not in pairing mode or incorrect pairing mode selected.                                                                                                                                   | Press the Wi-Fi button to turn the intelligent control on and reattempt to pair with the steps on page 18.                                                                                                                                                                                                                                                                              |
| Unable to connect to Wi-Fi    | <ul style="list-style-type: none"><li>• Incorrect Wi-Fi password. Router limitations or signal issues.</li><li>• Check router settings</li></ul>                                                    | <ul style="list-style-type: none"><li>• Verify the Wi-Fi password is correct.</li><li>• Avoid Wi-Fi names (SSID) with special characters.</li><li>• Ensure your router is not using MAC filtering or firewall blocks.</li><li>• Place the device closer to the router during setup.</li><li>• Encryption should be WPA2-PSK, and the authorisation type should be set to AES.</li></ul> |

|                                                      |                                                                                                                                         |                                                                                                                                                                                                                                                                                 |
|------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| The device was added, but did not respond in the app | <ul style="list-style-type: none"> <li>• Connection was incomplete.</li> <li>• App lacks required permissions.</li> </ul>               | <ul style="list-style-type: none"> <li>• Restart the Tuya Smart app and check if the device responds.</li> <li>• Ensure the app has access to Bluetooth, Location, and Nearby Devices in your phone's settings.</li> <li>• Remove and re-add the appliance if needed</li> </ul> |
| Stuck during pairing                                 | <ul style="list-style-type: none"> <li>• Too many connection attempts in a short time.</li> <li>• Wi-Fi signal interruption.</li> </ul> | <ul style="list-style-type: none"> <li>• Wait at least 10 seconds before restarting the pairing process.</li> <li>• Power cycle the device before retrying.</li> </ul>                                                                                                          |
| Frequent disconnections                              | <ul style="list-style-type: none"> <li>• Weak Wi-Fi signal.</li> <li>• Network instability.</li> </ul>                                  | <ul style="list-style-type: none"> <li>• Move the router closer or use a Wi-Fi extender.</li> <li>• Keep the device away from thick walls or electronic interference (e.g., microwave ovens).</li> <li>• Ensure the router firmware is up to date.</li> </ul>                   |

**WARNING:** Do not attempt to open, disassemble, or modify the unit. Doing so may result in electric shock, damage to the appliance and voiding of the warranty.

If the above troubleshooting is unable to fix the issue, you may refer to your internet provider for issues concerning network connections and may find suitable fixes for Tuya-related issues or queries on the link: <https://support.tuya.com/en/help>

If issues persist, please do not hesitate to contact customer service.

#### WASTE ELECTRICAL RECYCLING

This symbol indicates that this product is classified as electrical or electronic equipment and should not be disposed of with other household waste.

The Waste Electrical and Electronic Equipment (WEEE) Directive has been introduced across the European Union:

- To recycle waste electrical products using the best available recovery and recycling techniques in order to minimise the impact on the environment.
- To treat any hazardous substances.
- To avoid increasing landfills.

WEEE products should be disposed of by handing them over at a designated collection point. Please contact your local authority for more information about



## TECHNICAL SPECIFICATION

| Model  | Rated Voltage | Rated Frequency | Rated Power | Dimensions WxHxD (mm) | Net Weight (Kg) | Downlight Function |
|--------|---------------|-----------------|-------------|-----------------------|-----------------|--------------------|
| AGL035 | 220–240V ~    | 50/60 Hz        | Max 2000W   | 1210×660×230          | 29              | Available          |
| AGL056 |               |                 |             | 1570×850×230          | 39              | Available          |
| AGL060 |               |                 |             | 1600×800×250          | 45.4            | Not Available      |
| AGL061 |               |                 |             | 1205×830×250          | 33.57           | Available          |
| AGL062 |               |                 |             | 1570×850×250          | 36.3            | Not Available      |
| AGL063 |               |                 |             | 550×580×280           | 13.63           | Not Available      |
| AGL064 |               |                 |             | 1360×1115×320         | 43.87           | Not Available      |
| AGL065 |               |                 |             | 1360×1115×320         | 43.87           | Not Available      |



# PRODUCT FICHE

| Model Identifier(s): AGL035 / AGL056 / AGL060 / AGL061 / AGL062 / AGL063 / AGL064 / AGL065 |  |             |       |      |                                                                                |       |      |
|--------------------------------------------------------------------------------------------|--|-------------|-------|------|--------------------------------------------------------------------------------|-------|------|
| Item                                                                                       |  | Symbol      | Value | Unit | Item                                                                           |       | Unit |
| Heat output                                                                                |  |             |       |      | Type of heat input, for electric storage local space heaters only (select one) |       |      |
| Nominal heat output                                                                        |  | $P_{nom}$   | 2.000 | kW   | single stage heat output and no room temperature control                       | [no]  |      |
| Minimal heat output (indicative)                                                           |  | $P_{min}$   | 1.000 | kW   | two or more manual stages, no room temperature control                         | [no]  |      |
| Maximum continuous heat output                                                             |  | $P_{max,c}$ | 2.000 | kW   | with mechanic thermostat room temperature control                              | [no]  |      |
| Power consumption                                                                          |  |             |       |      | with electronic room temperature control                                       | [no]  |      |
| In off mode                                                                                |  | $P_o$       | N/A   | W    | electronic room temperature control plus day timer                             | [no]  |      |
| In standby mode                                                                            |  | $P_{sm}$    | 0.40  | W    | Electronic room temperature control plus week timer                            | [yes] |      |

|                                                                                                                                                               |               |      |      |                                                         |       |
|---------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------|------|------|---------------------------------------------------------|-------|
| In idle mode                                                                                                                                                  | $P_{idle}$    | N/A  | W    | Other control options<br>(multiple selections possible) |       |
| In network standby                                                                                                                                            | $P_{nsm}$     | 0.81 | W    | room temperature control, with presence detection       | [no]  |
| Standby mode with display of information or status                                                                                                            |               |      | [no] | room temperature control, with open window detection    | [yes] |
| Seasonal space heating energy efficiency in active mode                                                                                                       | $\eta_{S,on}$ | 94.0 | %    | distance control option                                 | [yes] |
|                                                                                                                                                               |               |      |      | adaptive start control                                  | [no]  |
|                                                                                                                                                               |               |      |      | working time limitation                                 | [yes] |
|                                                                                                                                                               |               |      |      | black bulb sensor                                       | [no]  |
|                                                                                                                                                               |               |      |      | self-learning functionality                             | [no]  |
|                                                                                                                                                               |               |      |      | control accuracy                                        | [no]  |
|                                                                                                                                                               |               |      |      |                                                         |       |
|                                                                                                                                                               |               |      |      |                                                         |       |
| Buy It Direct, Unit 2A, Trident Business Park, Neptune Way, Leeds Road, Huddersfield, HD2 1UA.<br>Buy It Direct, The Black Church, St Mary's Place, Dublin 7. |               |      |      |                                                         |       |

# EU DECLARATION OF CONFORMITY

Hereby, Furniture123 declares that these electric fires are in compliance with Directive 2014/53/EU.

The full text of the EU Declaration of Conformity is available at the following internet addresses:

<https://furniture123.co.EU/files/DOC/EU/AGL035.pdf>

<https://furniture123.co.EU/files/DOC/EU/AGL053.pdf>

<https://furniture123.co.EU/files/DOC/EU/AGL056.pdf>

<https://furniture123.co.EU/files/DOC/EU/AGL060.pdf>

<https://furniture123.co.EU/files/DOC/EU/AGL061.pdf>

<https://furniture123.co.EU/files/DOC/EU/AGL062.pdf>

<https://furniture123.co.EU/files/DOC/EU/AGL063.pdf>

<https://furniture123.co.EU/files/DOC/EU/AGL064.pdf>

<https://furniture123.co.EU/files/DOC/EU/AGL065.pdf>

# UK DECLARATION OF CONFORMITY

Hereby, Furniture123 declares that these electric fires are in compliance with the Radio Equipment Regulations 2017

The full text of the EU Declaration of Conformity is available at the following internet addresses:

<https://furniture123.co.UK/files/DOC/UK/AGL035.pdf>

<https://furniture123.co.UK/files/DOC/UK/AGL053.pdf>

<https://furniture123.co.UK/files/DOC/UK/AGL056.pdf>

<https://furniture123.co.UK/files/DOC/UK/AGL060.pdf>

<https://furniture123.co.UK/files/DOC/UK/AGL061.pdf>

<https://furniture123.co.UK/files/DOC/UK/AGL062.pdf>

<https://furniture123.co.UK/files/DOC/UK/AGL063.pdf>

<https://furniture123.co.UK/files/DOC/UK/AGL064.pdf>

<https://furniture123.co.UK/files/DOC/UK/AGL065.pdf>

# PSTI STATEMENT OF COMPLIANCE

Description: Electric Fire with LED Effect Lights – Amberglo  
Model Number: AGL035, AGL056, AGL060, AGL061, AGL062, AGL063, AGL064 & AGL065

Manufacturer: Buy It Direct, 2A Trident Business Park, Leeds Road, Huddersfield, HD2 1UA

PSTI Contact: [TiSecurity@buyitdirect.co.uk](mailto:TiSecurity@buyitdirect.co.uk)

We have prepared this statement of compliance and can confirm that this product is compliant with the deemed compliance conditions in Schedule 2 of The Product Security and Telecommunications Infrastructure (Security Requirements for Relevant Connectable Products) Regulations 2023.

Duration of security updates: 31/12/2029. This date is correct at the time of printing, but we may extend it. Please visit [www.liveit.com](http://www.liveit.com) for the latest information and details of our PSTI compliance.



Richard Leach

Compliance and Quality Manager, Buy It Direct, Huddersfield  
3<sup>rd</sup> August 2026

# SUPPORT

Office hours: 9 AM - 5 PM, Monday to Friday

[www.liveit.com/support](http://www.liveit.com/support)

0330 390 3062

Support@liveit.com

Buy It Direct

Unit 2A, Trident Business Park,

Neptune Way, Leeds Road,

Huddersfield, HD2 1UA.



FOLLOW US



# LIVEIT.COM



V20260803E