

better 
bathrooms

[illegible]

- V1 19/5/26**

Congratulations on your purchase

And welcome to our growing gang of savvy shoppers

We're on a mission to bring you extraordinary bathroom products, for less. From modern to traditional style ceramics, plus the gorgeous fixtures, fittings and furniture to match. So, you can fall in love with your space every single day.

As one of the UK's largest independent bathroom stores, we've received countless awards; including the National Business Awards UK, the Digital Entrepreneur Awards and being placed on The Sunday Times Fast Track 100.


We hope your new product goes above and beyond your expectations. However, should any problems occur, please:

- log in to your account and contact our customer services team via your self-serve portal – betterbathrooms.com/CustomerAccount/Login
- contact us via betterbathrooms.com/content/contact-us

Important information

- Please read these instructions thoroughly and retain for future reference
- Always check for pipes and cables before drilling
- Product should be installed to comply with local water bylaws and regulations

Dimensions

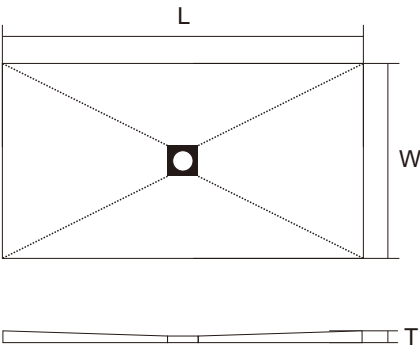

Product code	L	W	T
LAG10008	1000	800	20
LAG12008	1200	800	20
LAG12009	1200	900	20
LAG14008	1400	800	25
LAG14009	1400	900	25
LAG1700	1700	800	25

Tools required

Saw, Spirit Level, Paint brush

Installation on Wooden Framework Floor



1. Place the tray in the required position and mark the drain hole position and tray outline.

2. Cut and move the floor board to accept the shower tray and drain.


3. Measure and mark where your drain and waste pipe will be fitted. Connect the drain body to the waste pipe with the waste parts two O-rings and Connection pipe nut supplied as shown in right picture. (Always check for leaks before final installation of shower tray).



4. Fix battens below the top of the joists to support the subsequent wooden boards. The thickness of wooden boards is how far the battens should place below the top of the joist. A 5cm wide by 3cm thick battens can be used.

5. Once you are satisfied with the drainage, place the wooden boards in position as the picture shown.

6. Apply the tile adhesive evenly over the area where the shower tray is to be installed. (Tile adhesive Not supplied)

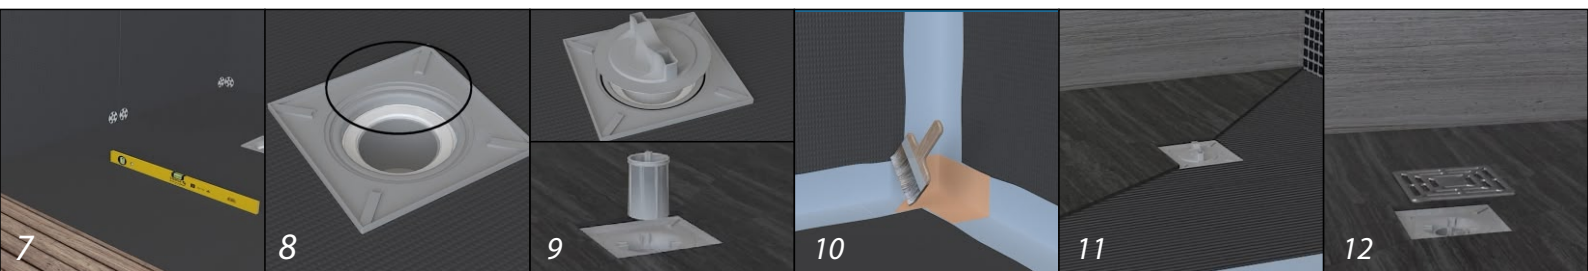

7. Laying the tray on the adhesive area, use a spirit level to make sure that the tray is level.

8. Put the Sealing ring into the groove of plastic support.

9. Fix the Drain connector into the drain body with a Connection key and put the Dip-tube inside (Supplied).

10. Seal all joints by waterproof paint and membrane (Not supplied).


11/12. The shower tray is finished and can be tiled.

Tips : The size of the tiles and mosaic on the shower tray must be $\geq 50 \times 50$ mm.
Weight Limit: 500kg


Tools required

Saw, Spirit Level, Paint brush

Installation on Concrete floor

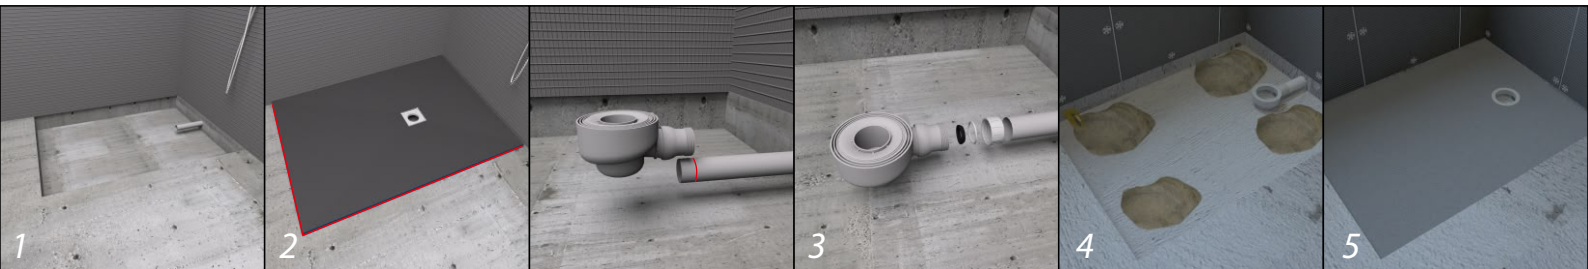


1. Dig out the positions for installing trays and floor drains on the concrete base layer.
2. Place the tray, measure and mark where your drain and waste pipe will be fitted.
3. Connect the drain body to the waste pipe with the waste parts two O-rings and Connection pipe nut supplied. (Always check for leaks before final installation of shower tray).
4. Fill this pit with mortar, making the height of the mortar level with the drain.
5. Apply the tile adhesive evenly over the area where the shower tray is to be installed. (Tile adhesive Not supplied)

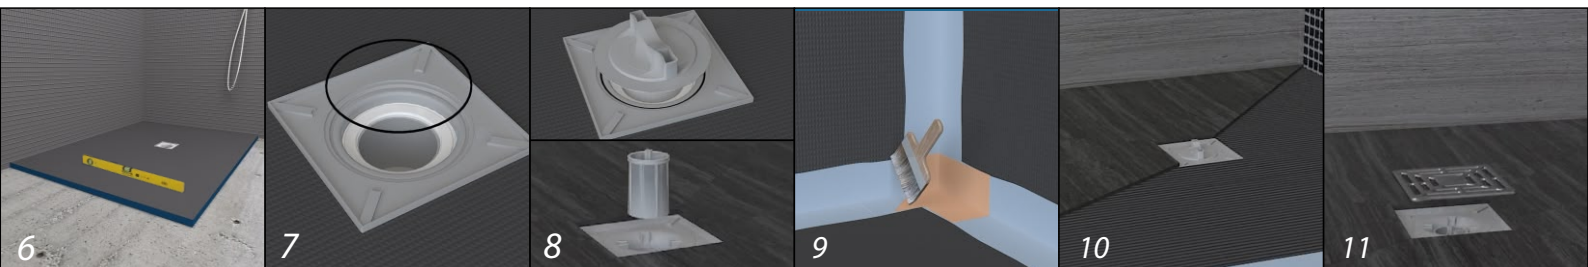

6. Laying the tray on the adhesive area, use a spirit level to make sure that the tray is level.
7. Put the Sealing ring into the groove of plastic support.
8. Fix the Drain connector into the drain body with a Connection key and put the Dip-tube inside (Supplied).
9. Seal all joints by waterproof paint and membrane (Not supplied).
- 10/11. The shower tray is finished and can be tiled.

Parts / Diagrams

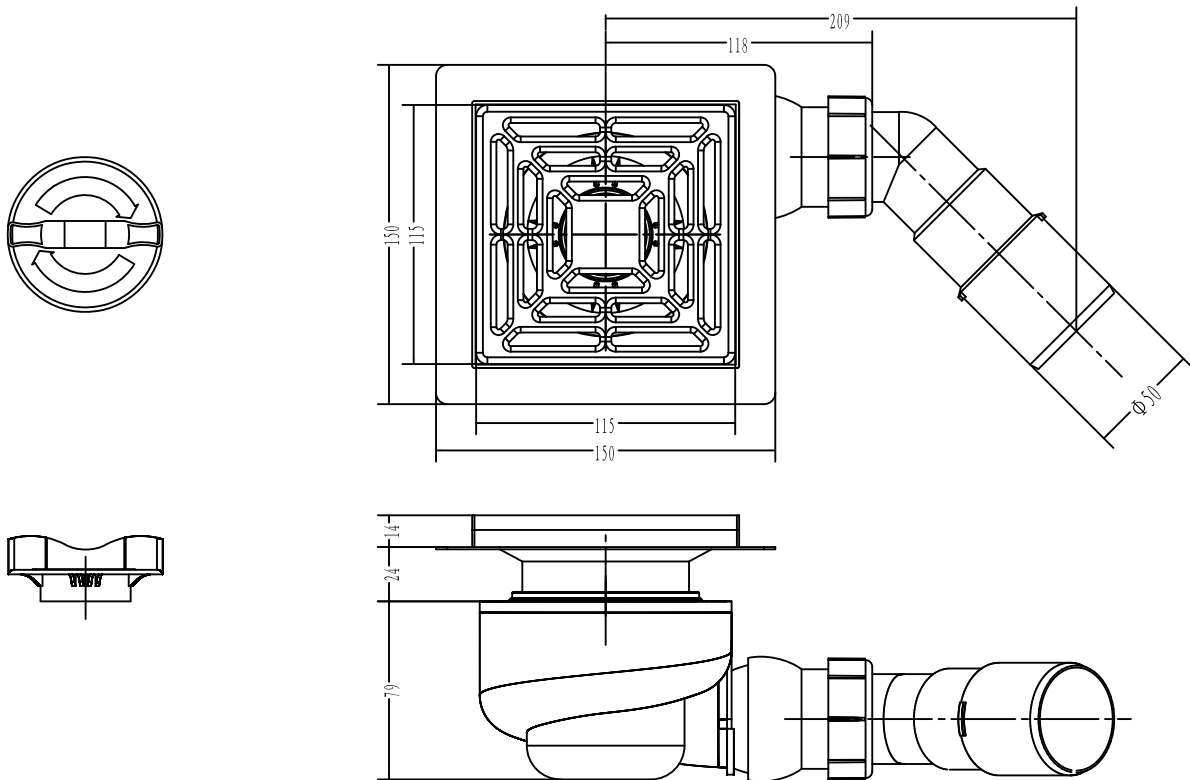

Features:

- 79mm height of the main drain body.
- Alternative 40mm & 50mm connector for drain body.
- Adjustable height from 10mm to 17mm tiles with the Riser piece(Supplied)
- Extension frame and drain grill at 115mm.
- Flow rate at 35 liters per minute.
- Main drain body material is PP, above the main drain body is ABS.

Parts Required

Description		Qty
Floor drain body		1
Connection pipe nut		1
40mm/50mm connection pipe		1
40mm connection pipe		1
White connection pipe O - Ring		1
Black connection pipe O - Ring		1
Drain Connector		1
Dip-tube		1
Drain body sealing washer		1
Connection key		1
Sealing ring		1
Riser piece		1

Maintenance, Care & Cleaning

- Store trays indoors in a dry, well-ventilated and shaded area.
- Stack trays horizontally on a flat, level surface, supported evenly by wooden battens or spacers to avoid concentrated stress. Do not stack heavy loads on top, step on or drop boards, to prevent surface damage, cracking or core breakage.
- Keep trays away from strong acids, alkalis, solvents, oils and other chemicals to avoid contamination or corrosion that may reduce tile bonding strength.
- Inspect the trays surface before installation to ensure it is clean, dry, free of dust, grease, oil or release agent residues. Remove loose dust with a soft cloth or brush.
- After fixing the trays in place, ensure the surface is flat and joints are aligned. All fastener heads must be countersunk and properly sealed to prevent future hollowing or loosening.
- Ensure that the joints are smooth and sealed tightly to prevent water seepage caused by thermal expansion and contraction or structural deformation in the later stage.

For more information

- visit betterbathrooms.com
- email customerservices@buyitdirect.co.uk
- call 0330 390 3062
- write to Trident Business Park, Neptune Way, Huddersfield, HD2 1UA

**better
bathrooms** 

Part of the BuyItDirect Group