

LIVEIT^{.COM}


Media Wall With Oak Shelving

SKU: AGL114 / AGL115

INSTRUCTIONS

Product Size: Width 210cm x Depth 44cm x Height 220cm

Estimated Assembly Time: 2 people 1 hour

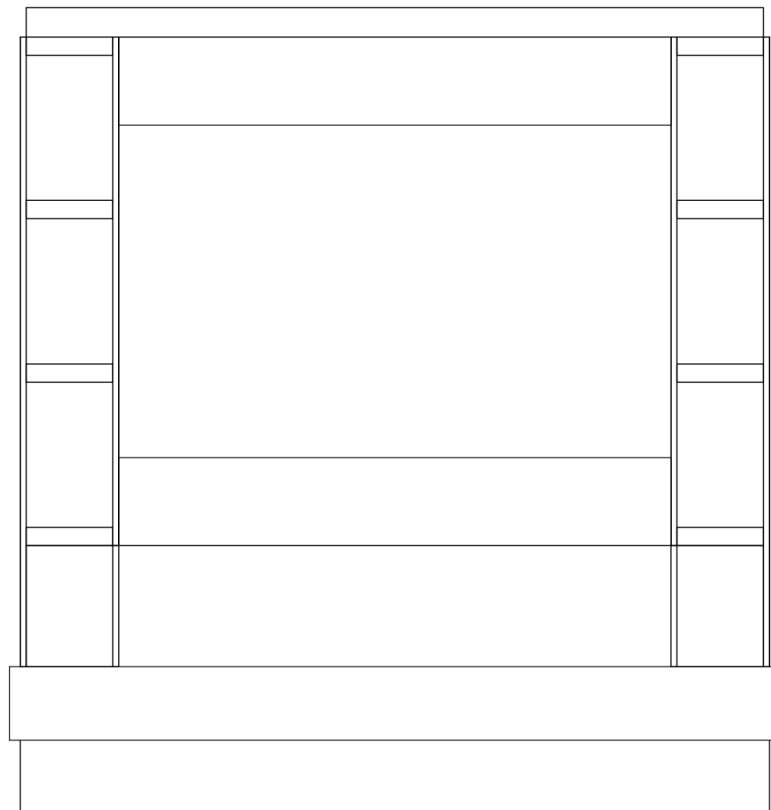


Version Date: 2026.07.10

CALL US FOR ASSISTANCE: 0330 0412 270



EXPLODED DIAGRAM

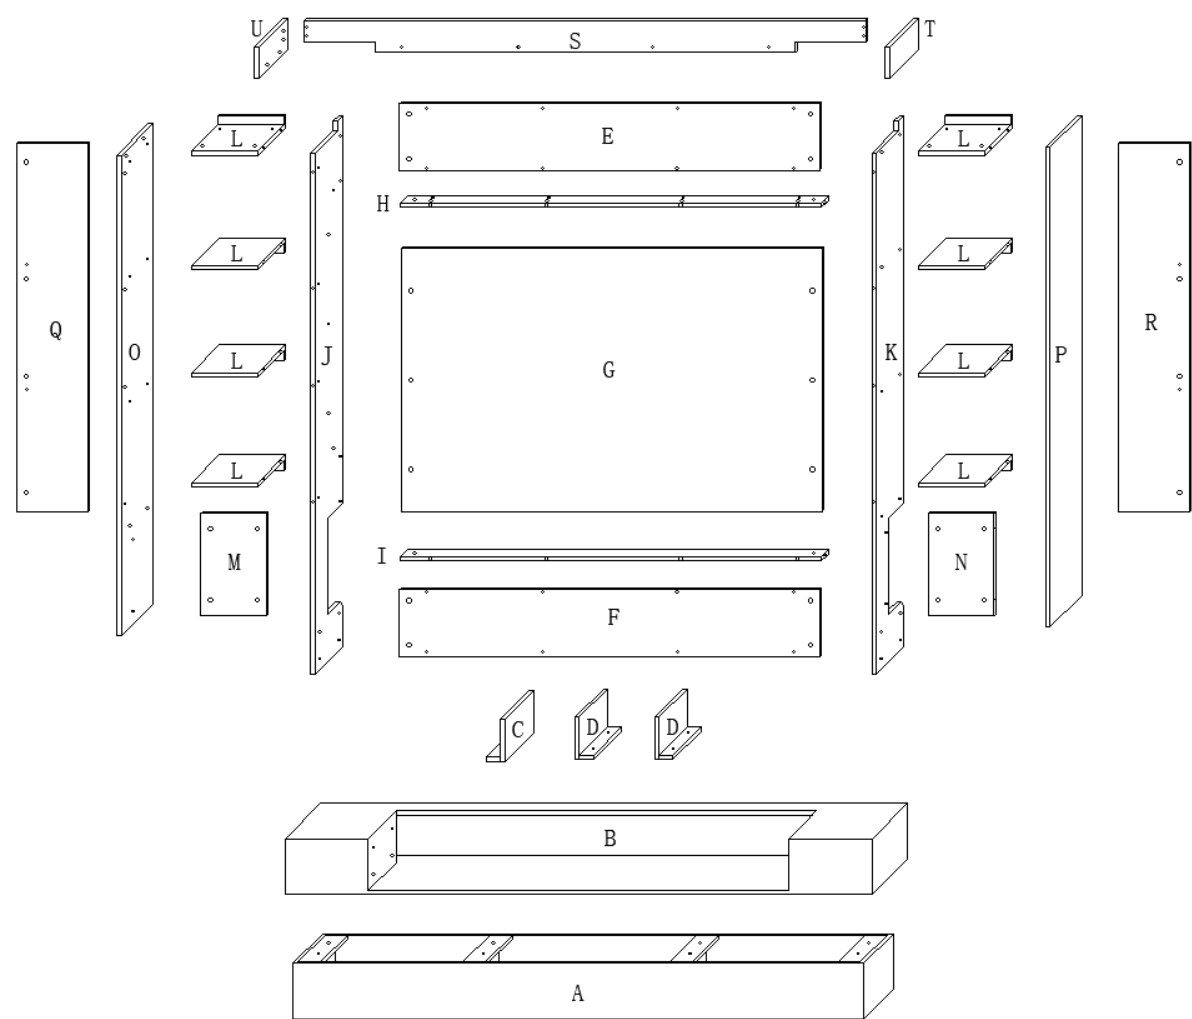

Box 1			Box 2		
Part	Description	Qty	Part	Description	Qty
B	Base Panel	1	A	Base Panel	1
C	Right Lower Support Panel	1	S	Upper Front Panel	1
D	Left Lower Support Panel	2	J	Inner Right Side Panel	1
F	Lower Front Panel	1	K	Inner Left Side Panel	1
L	Shelf	8			
M	Right Lower Back Panel	1			
N	Left Lower Back Panel	1			

CALL US FOR ASSISTANCE: 0330 0412 270





T	Upper Left Side Panel	1				
U	Upper Right Side Panel	1				
Box 3						
Part	Description	Qty		Part	Description	Qty
E	Front Panel	1		O	Right Side Panel	1
G	Back Panel	1		P	Left Side Panel	1
H	Front Support Panel	1		Q	Right Back Panel	1
I	Lower Front Support Panel	1		R	Left Back Panel	1

CALL US FOR ASSISTANCE: 0330 0412 270



PARTS SUPPLIED (LOCATED IN BOX 3)

NOTE: Pictures and contents in this manual may differ from the product due to continuous product improvement.


PART	DIAGRAM	DESCRIPTION	QTY
U1		M4X25 screw	30 PCS
U2		Pin	94 PCS
U3		Cam	94 PCS
U4		M4X30 screw	4 PCS
U5		M4X14 screw	12 PCS
U6		4-hole bracket	2 PCS
U7		L-shaped bracket	2 PCS
U8		M5X10 screw	2 PCS
U9		Shakeproof washer	6 PCS
U10		plastic wall anchor	6 PCS
U11		mounting bracket	2 PCS
U12		M5X60 screw	6 PCS
-		-	-

IMPORTANT: Please read the instructions in full before assembly and keep for future reference.

CALL US FOR ASSISTANCE: 0330 0412 270



ASSEMBLY

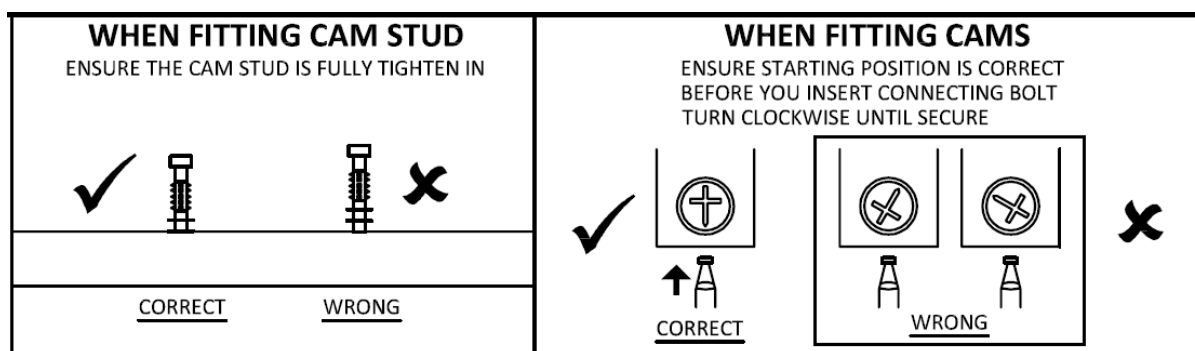

While installing the fire and television and until it is secure to a wall, this unit will be unstable. Ensure that someone of sufficient strength is holding the unit to prevent it from falling.

Product Warnings, Do's and Don'ts.

This unit is coated with a white water-based primer. Finish with your colour of choice. Always check paint supplier's instructions for compatibility, safety and application.

Warnings

- Keep fittings out of children's reach and keep children well away from construction area.
- This product should only be used on firm level ground.
- Please periodically check all fittings and re-tighten as necessary.
- Please do not sit or stand on your furniture.
- Avoid exposing the furniture to excessive heat or direct sunlight as this can cause deterioration of the colour.
- Unwrap all packaging materials and place the components on top of the carton box or on a clean floor to protect it from damage.

CALL US FOR ASSISTANCE: 0330 0412 270



Do's

- We suggest you retain these instructions for future reference.
- We suggest you spend a short time reading through this leaflet before you start.
- When you are ready to start, make sure that you have the right tools and plenty of space.
- Unwrap all packaging materials and place the components on a clean surface to protect it from damage. We recommend that the packaging is used to protect the surfaces during assembly.
- Carefully check that you have all the parts before beginning assembly.
- Due to the size of the product, we recommend that it is assembled in the room intended for use.
- Ensure the product is fully assembled as illustrated and all fixings fully tightened before use. Check fixings regularly to ensure they remain tight.


Don'ts

- Do not drag or pull your furniture.
- Do not use silicone furniture polish as it can break down the lacquer finish.


CALL US FOR ASSISTANCE: 0330 0412 270



Step 1:

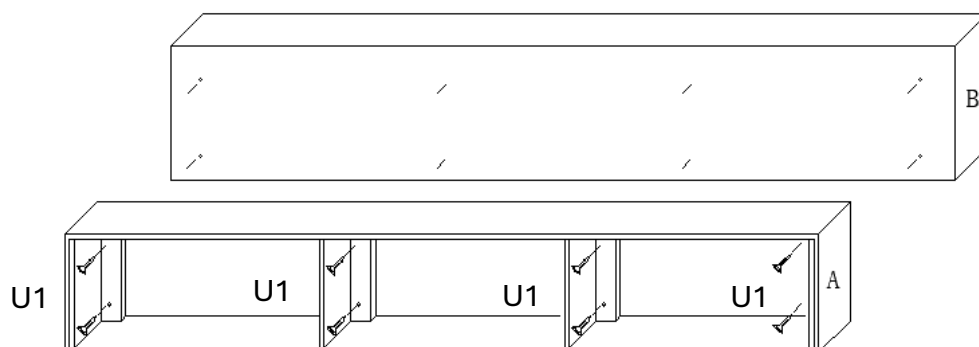


Step 2:

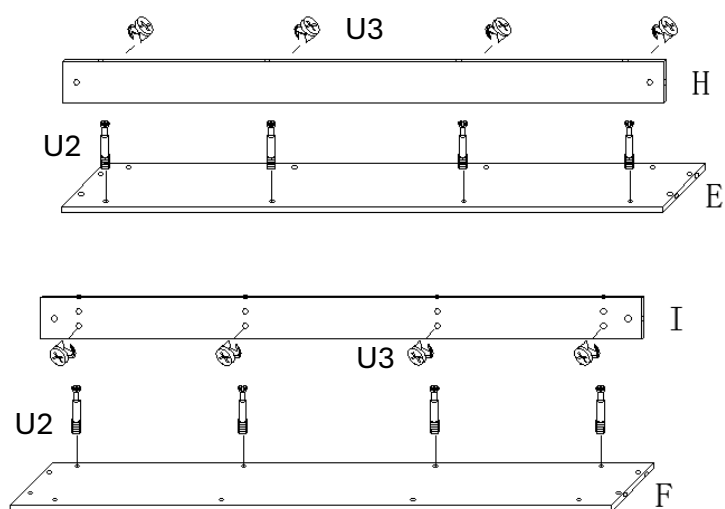


CALL US FOR ASSISTANCE: 0330 0412 270



Step 3:

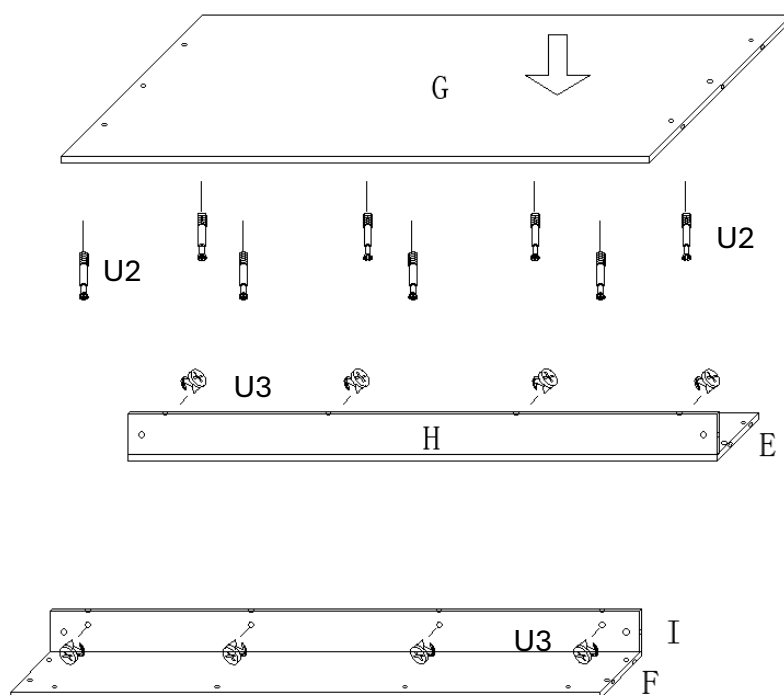


Step 4:

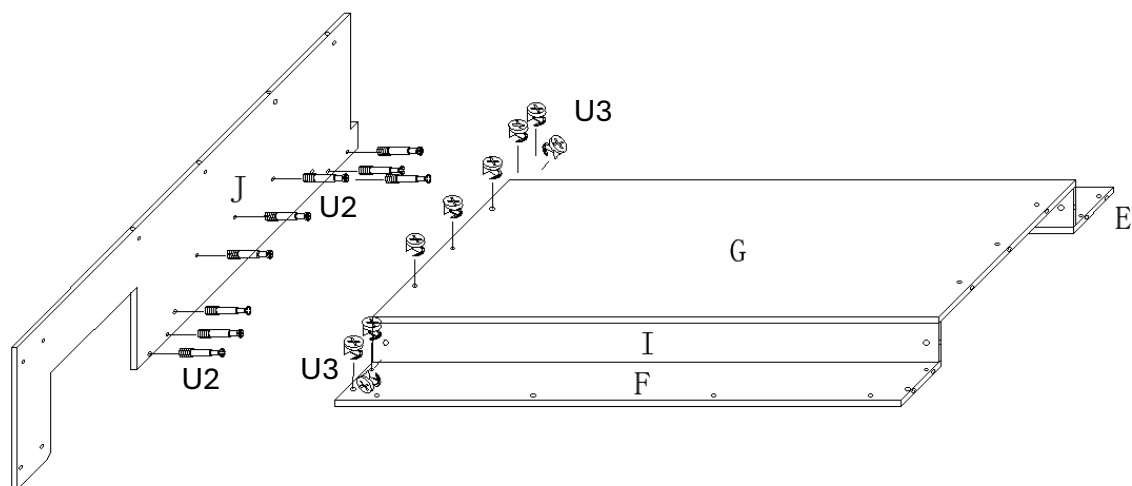


CALL US FOR ASSISTANCE: 0330 0412 270



Step 5:

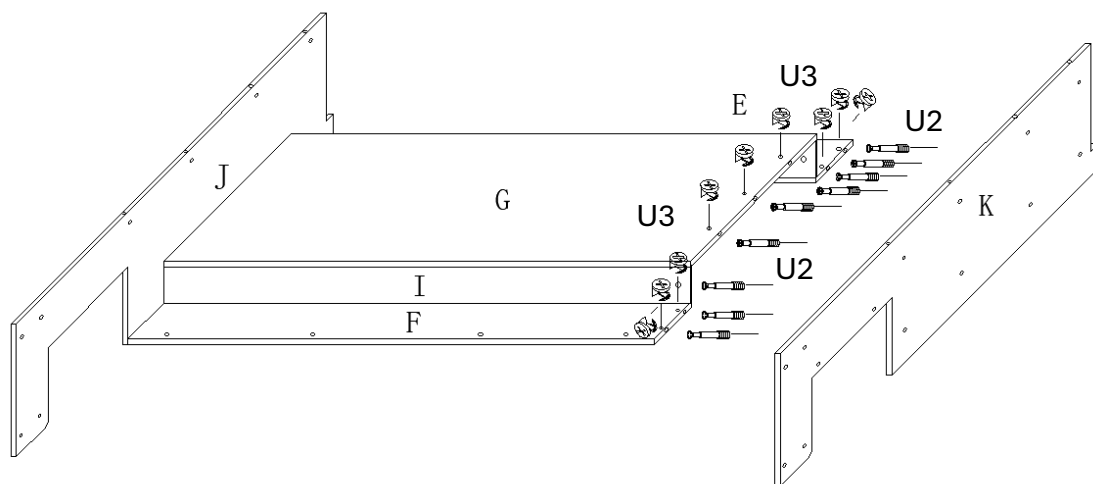


Step 6:

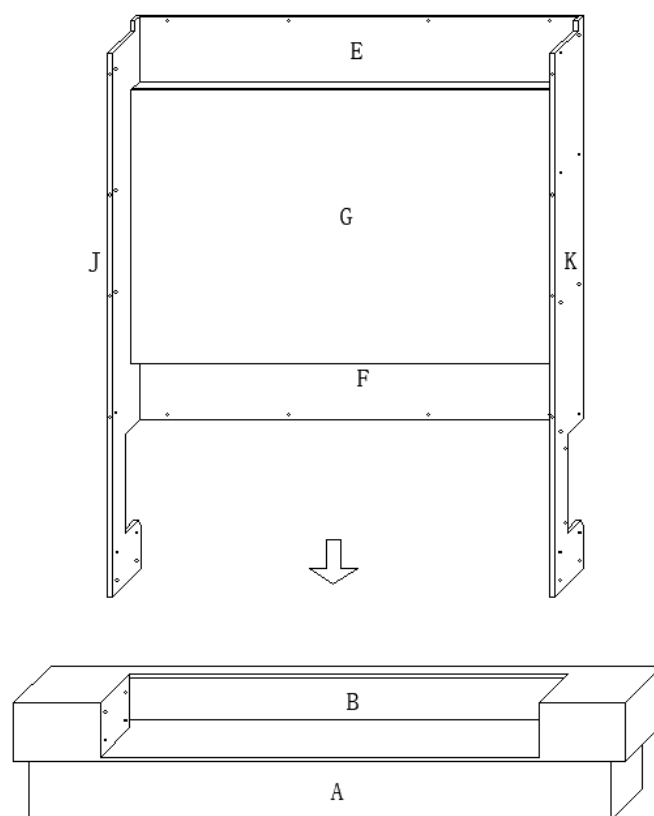


CALL US FOR ASSISTANCE: 0330 0412 270



Step 7:

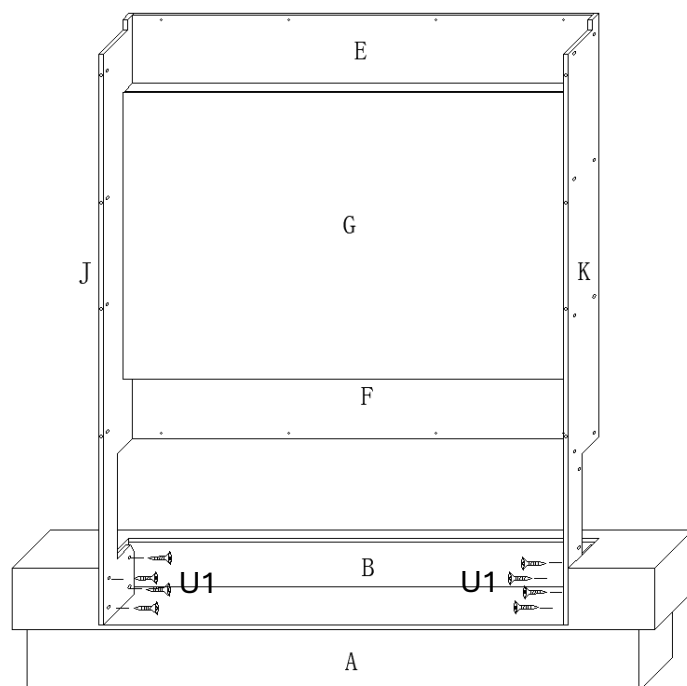


Step 8:

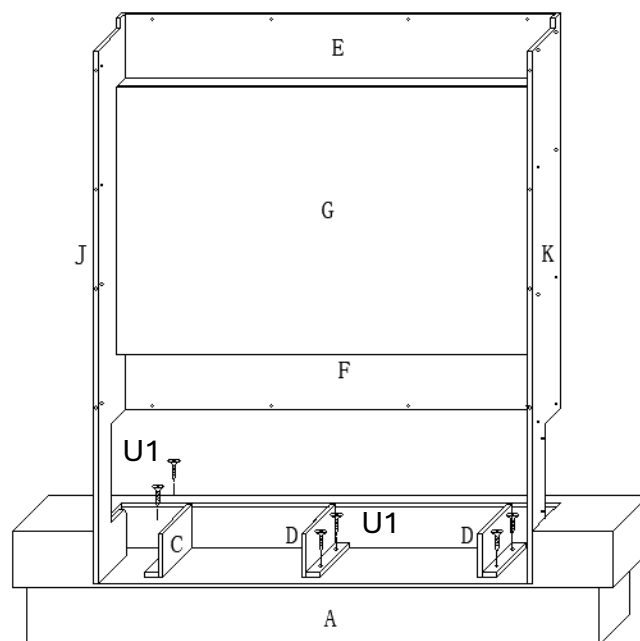


CALL US FOR ASSISTANCE: 0330 0412 270



Step 9:

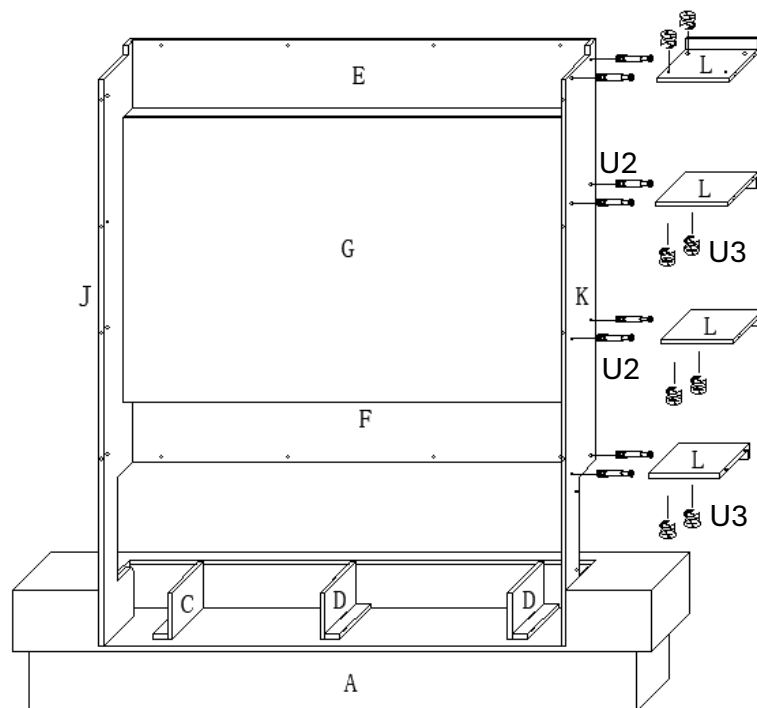


Step 10:

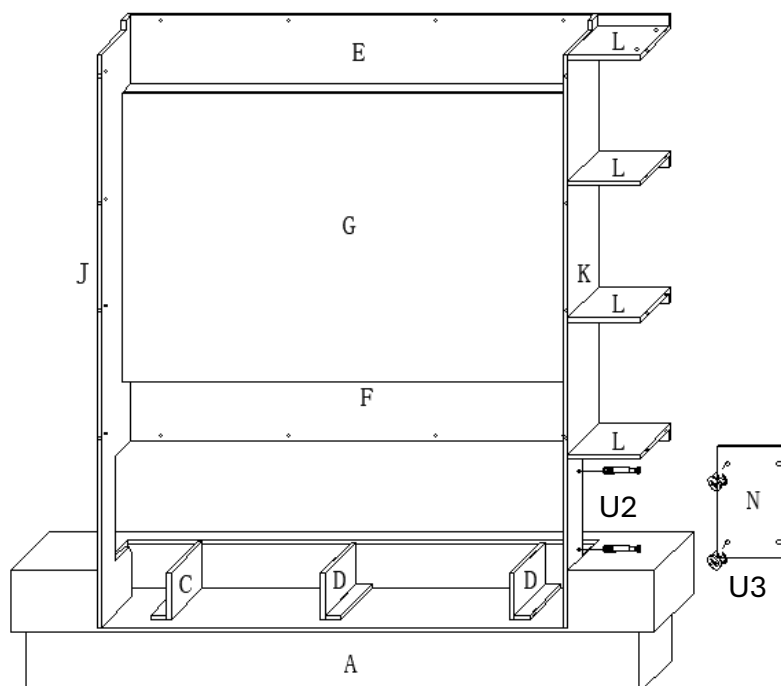


CALL US FOR ASSISTANCE: 0330 0412 270



Step 11:

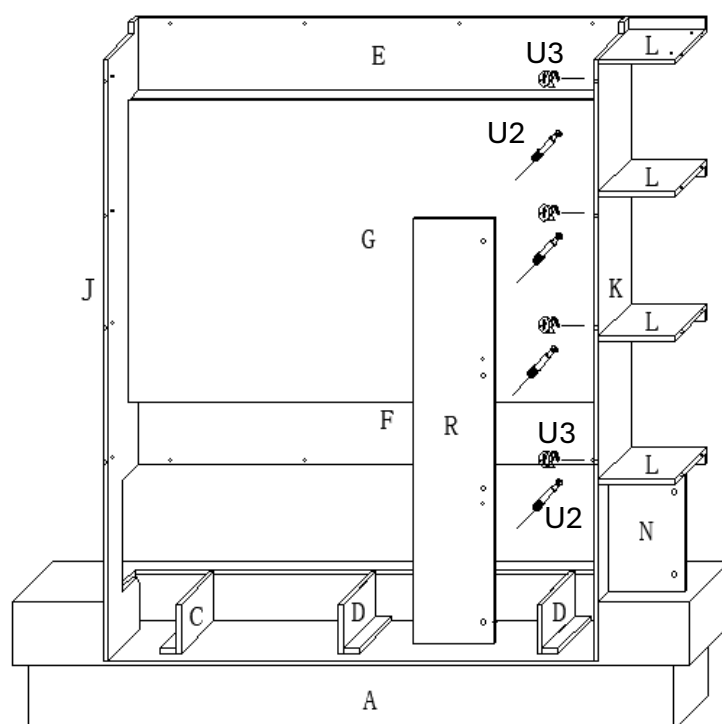


Step 12:

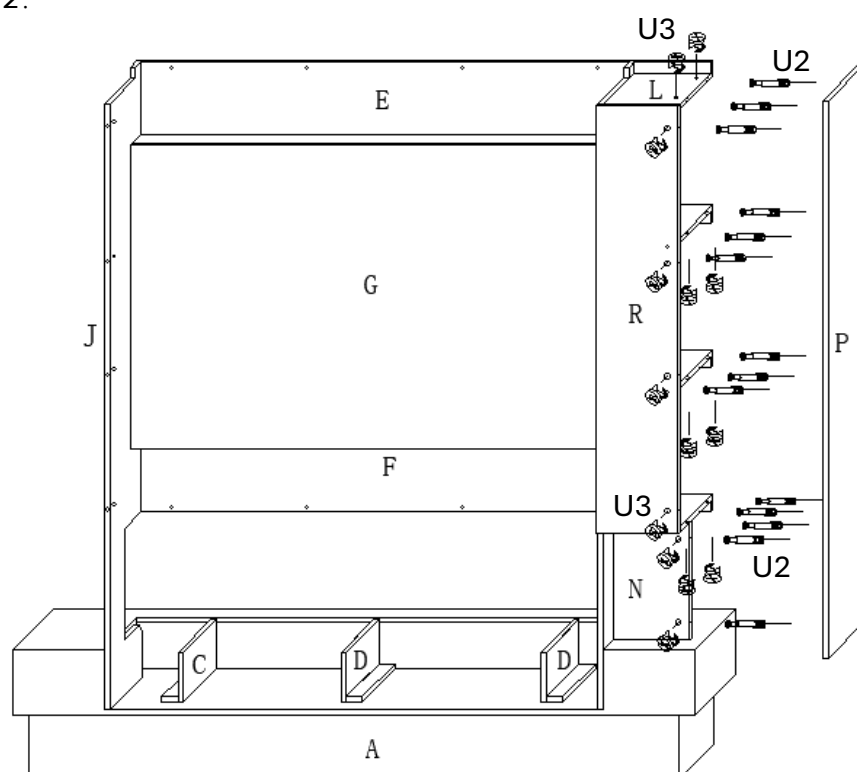


CALL US FOR ASSISTANCE: 0330 0412 270



Step 13:

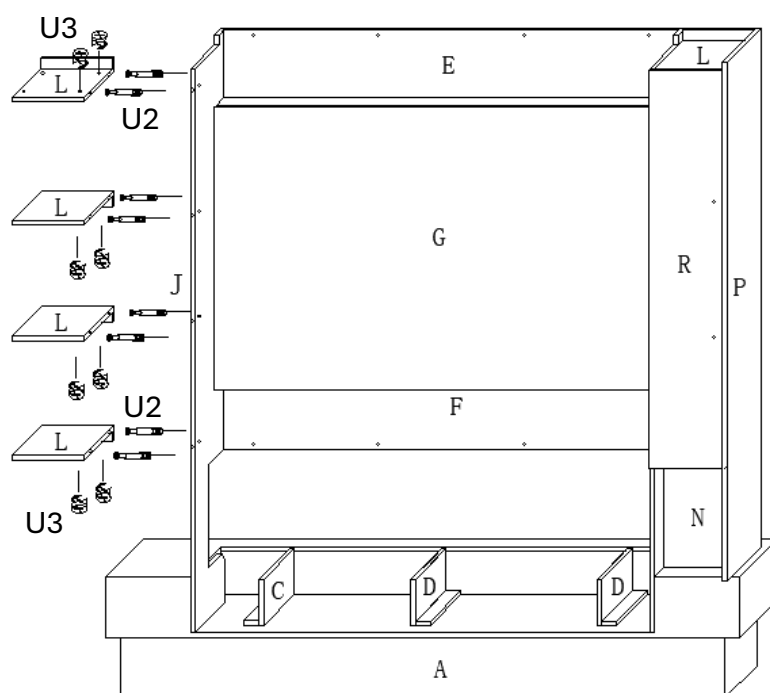


Step 14:

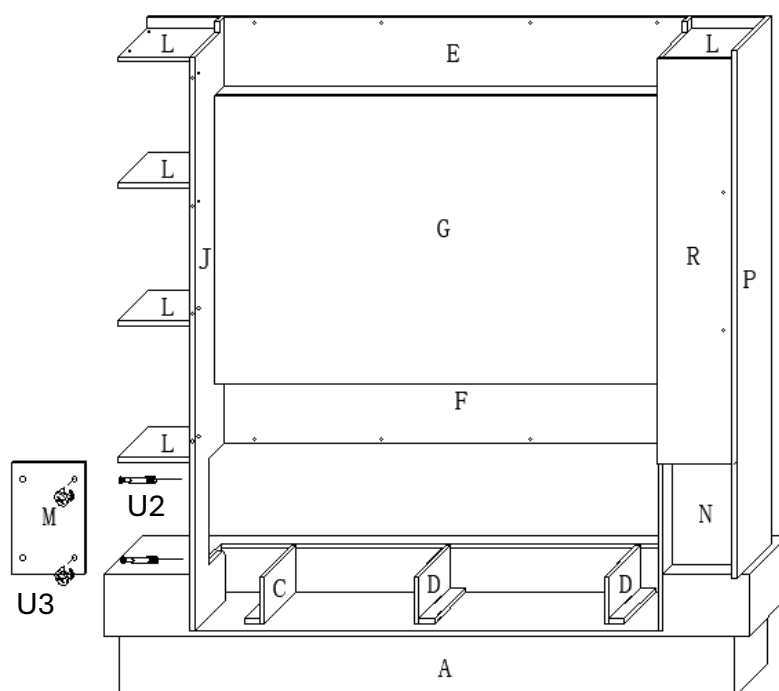


CALL US FOR ASSISTANCE: 0330 0412 270



Step 15:

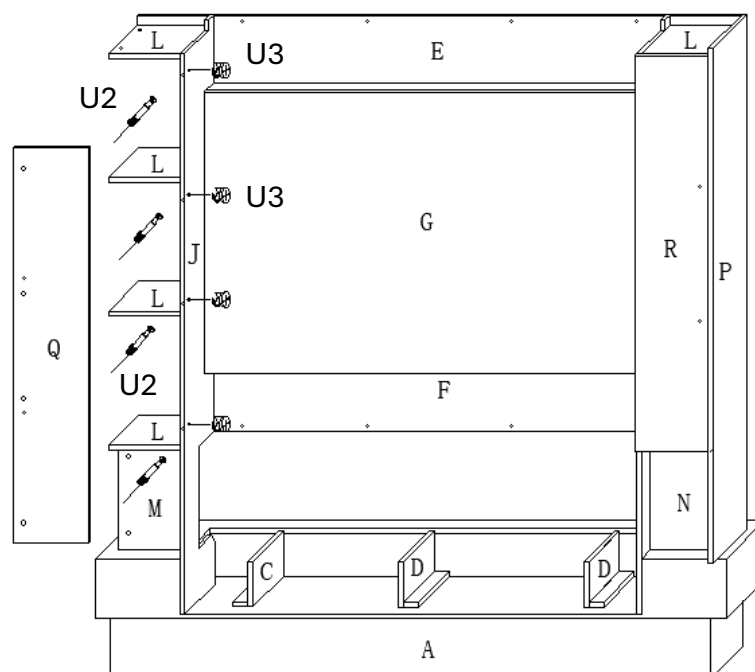


Step 16:

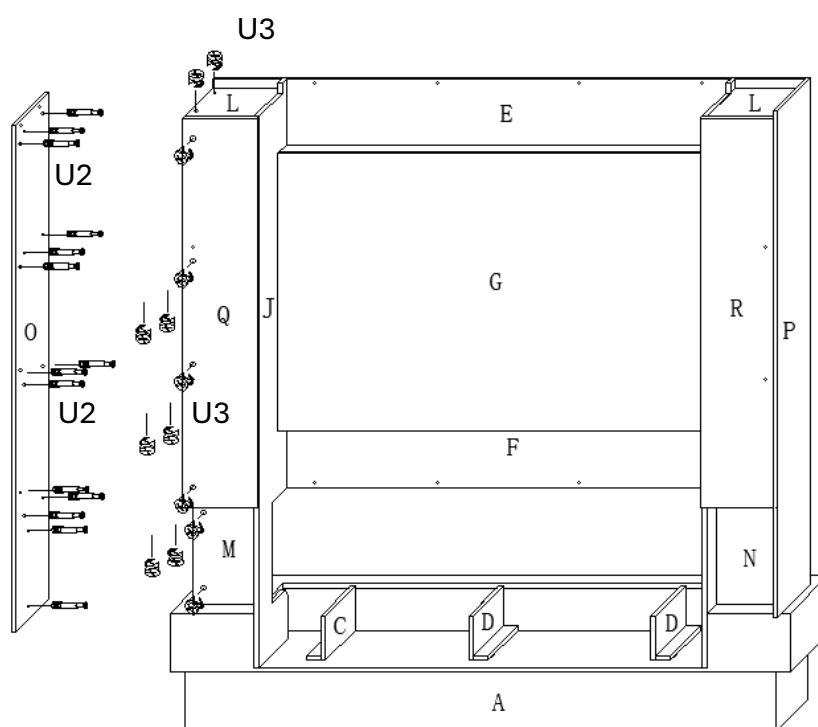


CALL US FOR ASSISTANCE: 0330 0412 270



Step 17:

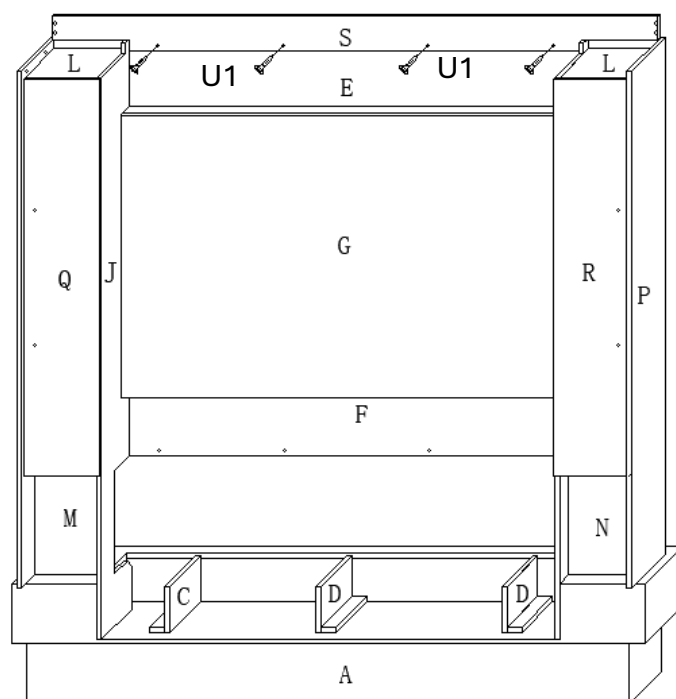


Step 18:

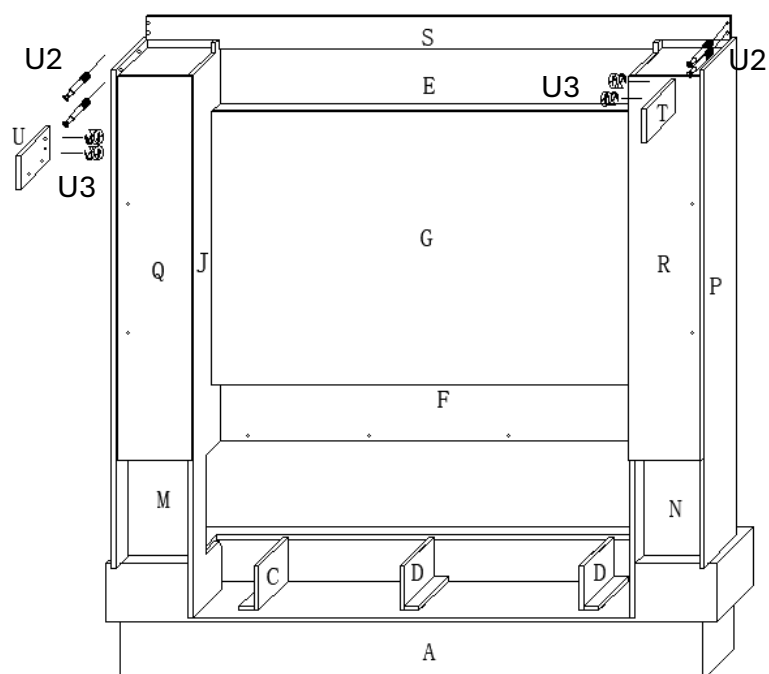


CALL US FOR ASSISTANCE: 0330 0412 270



Step 19:

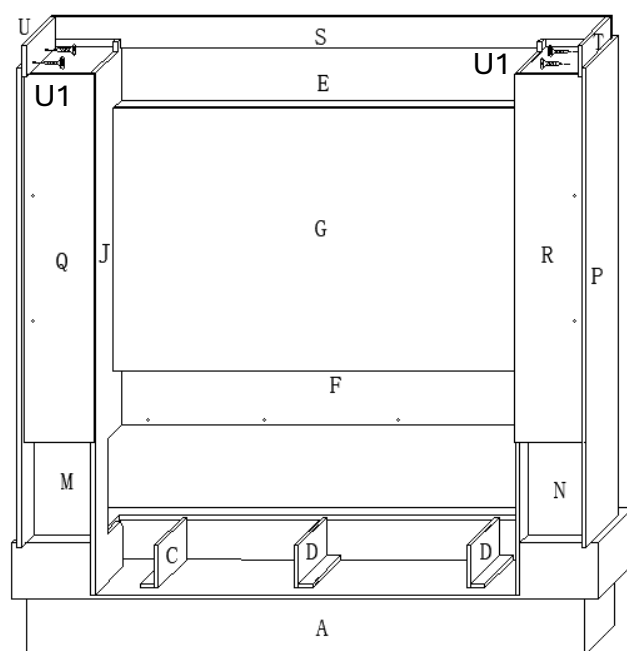

Step 20:

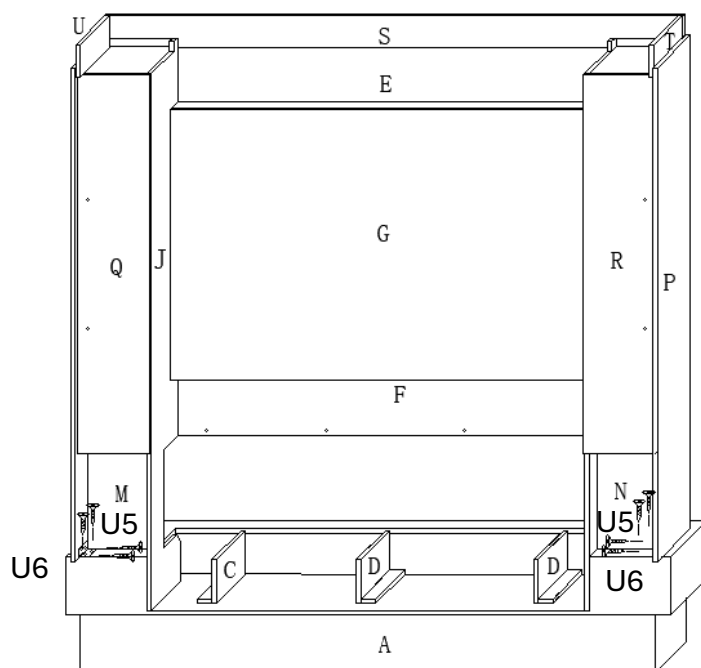


CALL US FOR ASSISTANCE: 0330 0412 270




Installation of heater

Step 1: Fix 2 L-shaped brackets [U7] with 2 screws [U8] and 2 shakeproof washers [U9] on top of the heater.

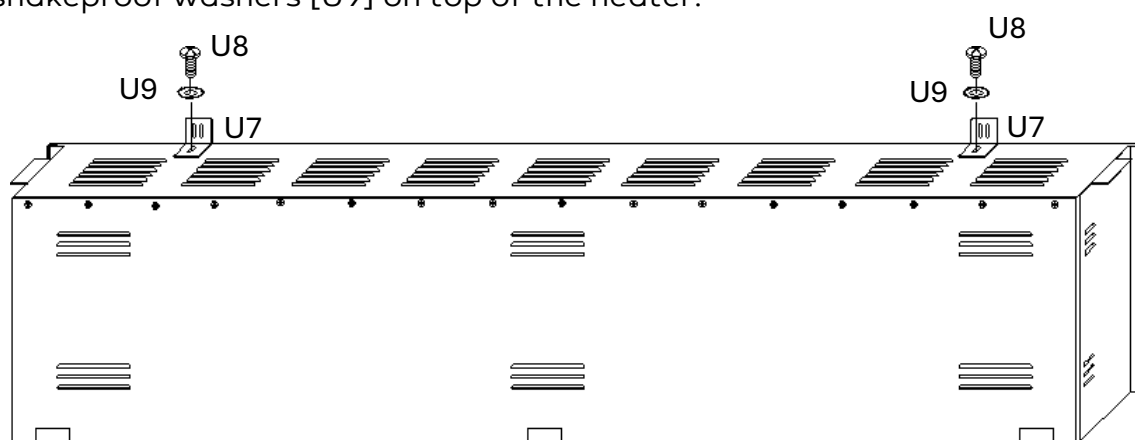


Step 2: Place the heater into the TV cabinet.

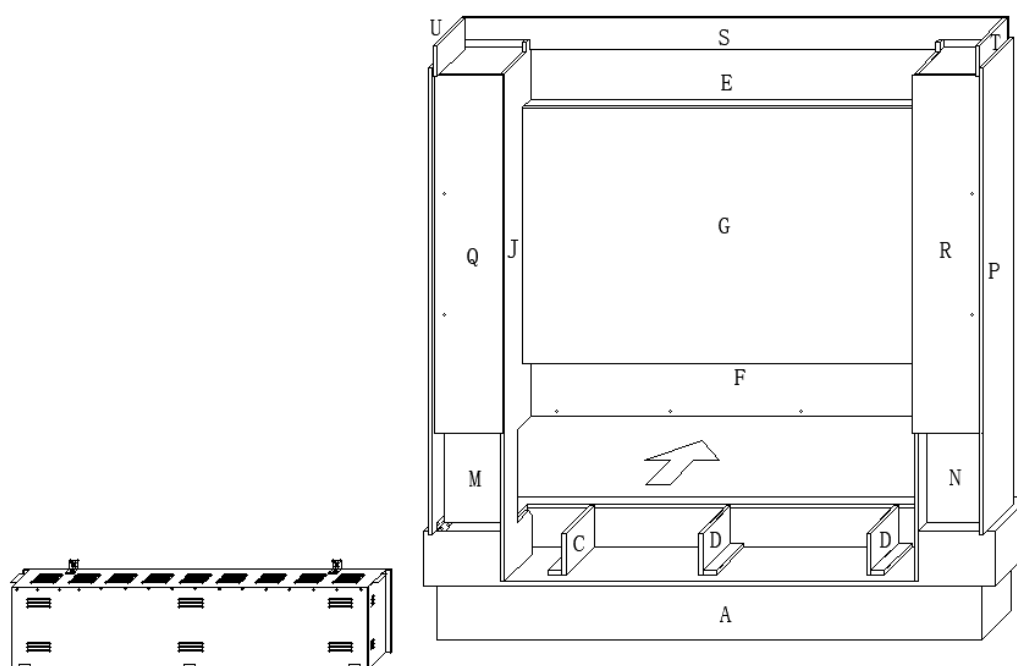

CALL US FOR ASSISTANCE: 0330 0412 270



Step 3: Attach 2 L-shaped brackets [U7] to panel F with 4 screws [U5] and 4 shakeproof washers [U9].

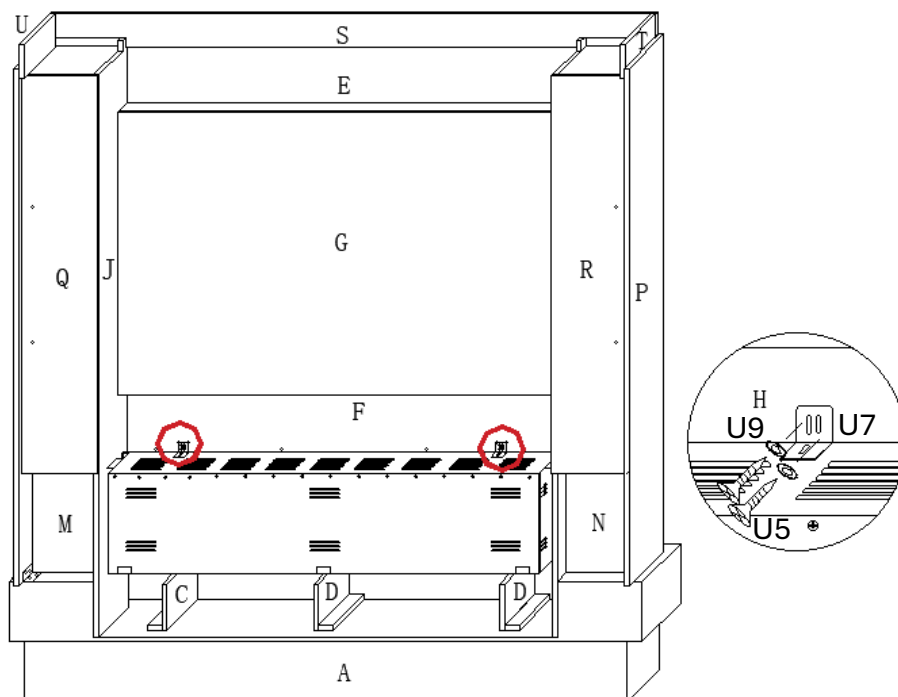

Refer to the instructions supplied with the fire to ensure correct installation and ventilation.


CALL US FOR ASSISTANCE: 0330 0412 270



Wall mount

Note: The fixing supplied are suitable for a masonry wall. Check the construction of your wall and use appropriate fixings. Beware of cables and pipework that maybe in the wall.


Step 1: Select the wall location where you want to install your TV cabinet. Draw two vertical lines using a vertical instrument and mark 6 drill holes for the 6 anchor screws.

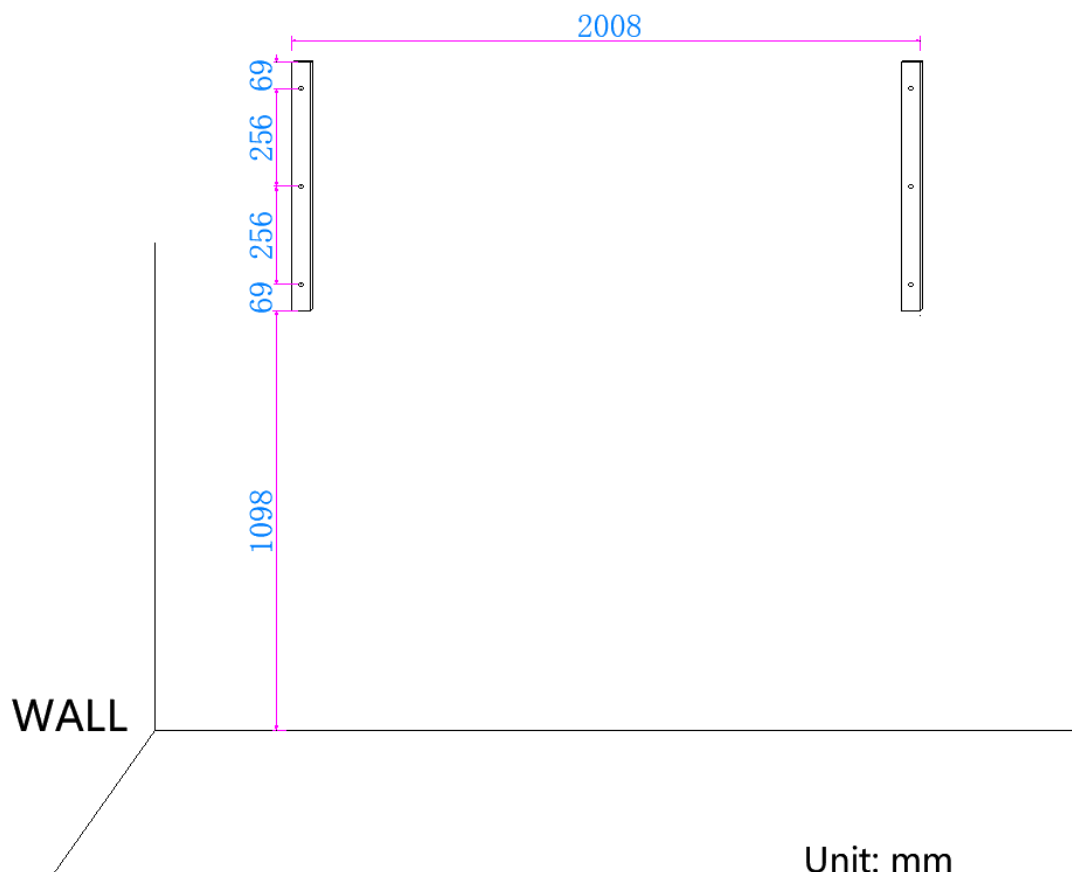


Step 2: Drill 6 holes 8 mm (5/16in) in diameter and 43 mm (1.7in) deep on the marked locations. Insert 6 plastic wall anchors [U10] into the holes and gently tap until the flange on the anchors are against the wall surface.

CALL US FOR ASSISTANCE: 0330 0412 270



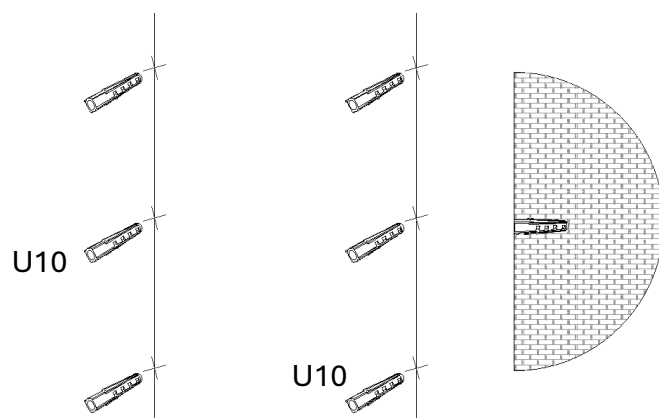


Step 3: Secure the mounting brackets [U11] to the wall anchors using the 6 anchor screws [U12].

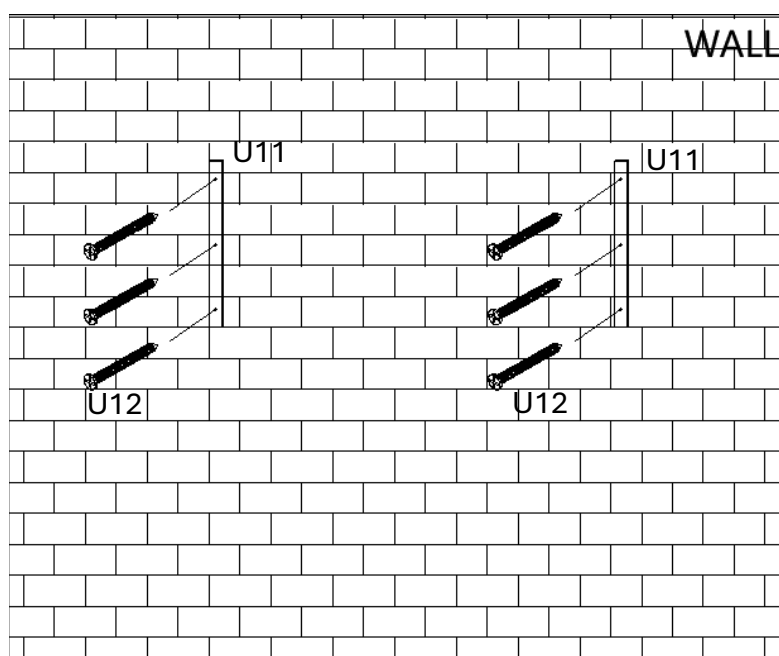

Step 4: Place the TV cabinet. Secure the TV cabinet to the mounting brackets [U11] using the 4 screws [U4].

CALL US FOR ASSISTANCE: 0330 0412 270



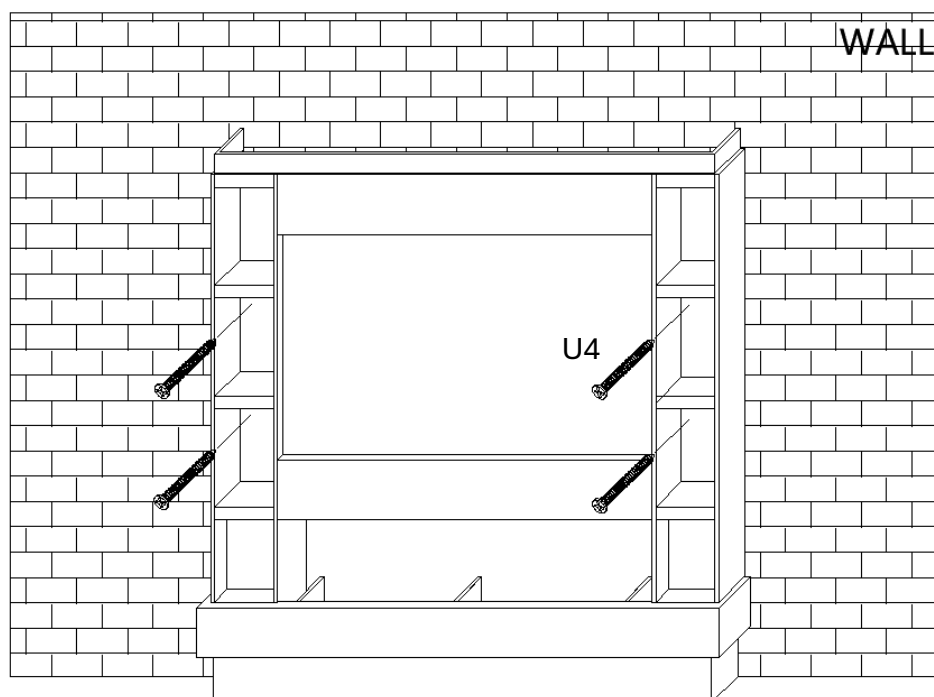

Installation of television


Note: This unit is designed for televisions with up to 65 inch screens, with a maximum overall size of 153 x 90 cm and a maximum weight of 45 KG.

CAUTION: The accessories supplied with your Television may differ from those shown here, and the following details are for reference only.


1. Plan the position of the TV and bracket before drilling any holes.
2. Follow the bracket supplier's instructions, remembering that you are fitting to a wooden panel.
3. For neat installation you may want to cut cable holes in the panel to feed mains and data aerial cables from your TV.

CALL US FOR ASSISTANCE: 0330 0412 270



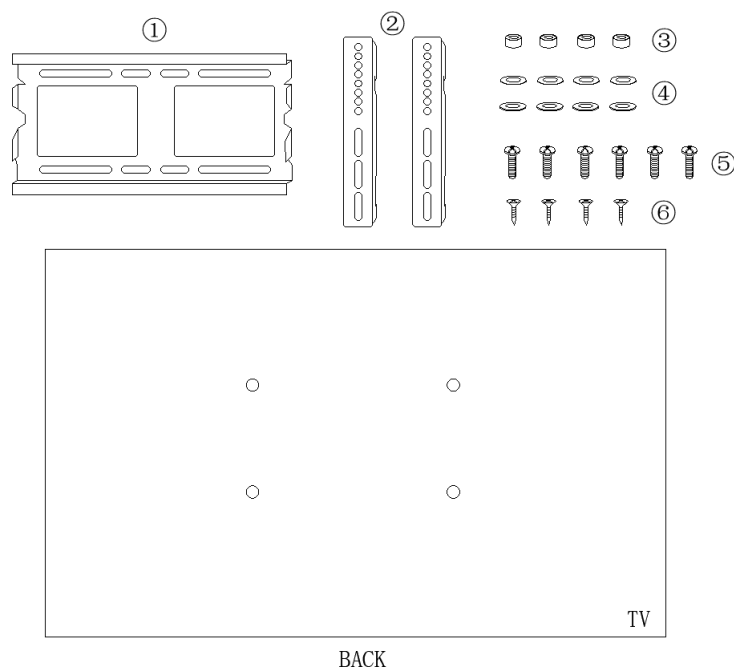


Step 1: Fix 2 wall mounting brackets [2] to the back of the TV with 4 plastic washers [3], 4 screws [5] and 4 washers [4].

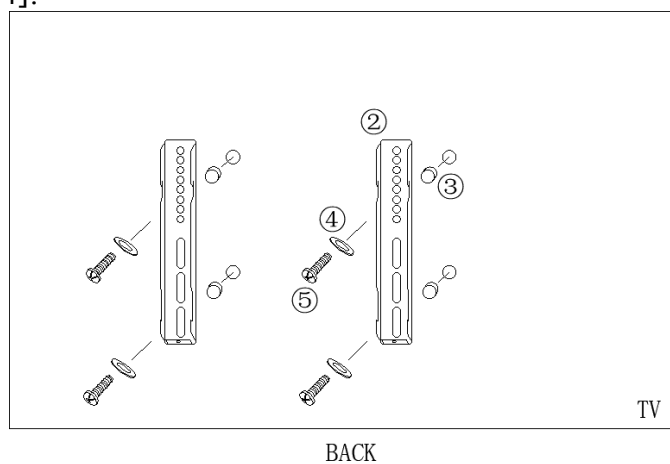



Step 2: Fix the wall bracket [1] to the TV cabinet with 4 screws [6] and 4 washers [4].

CALL US FOR ASSISTANCE: 0330 0412 270



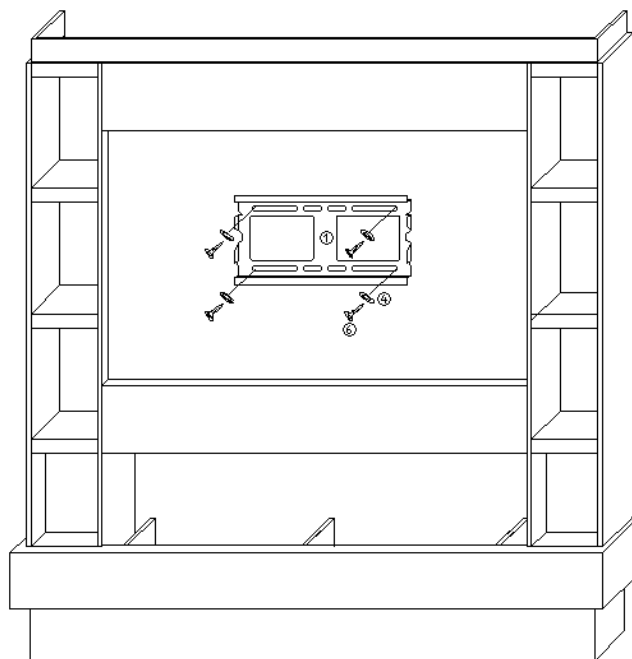


Step 3: Connect the wall mounting bracket [2] on the back of the TV to the wall bracket [1].

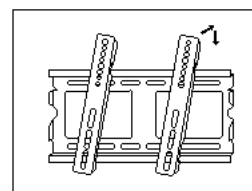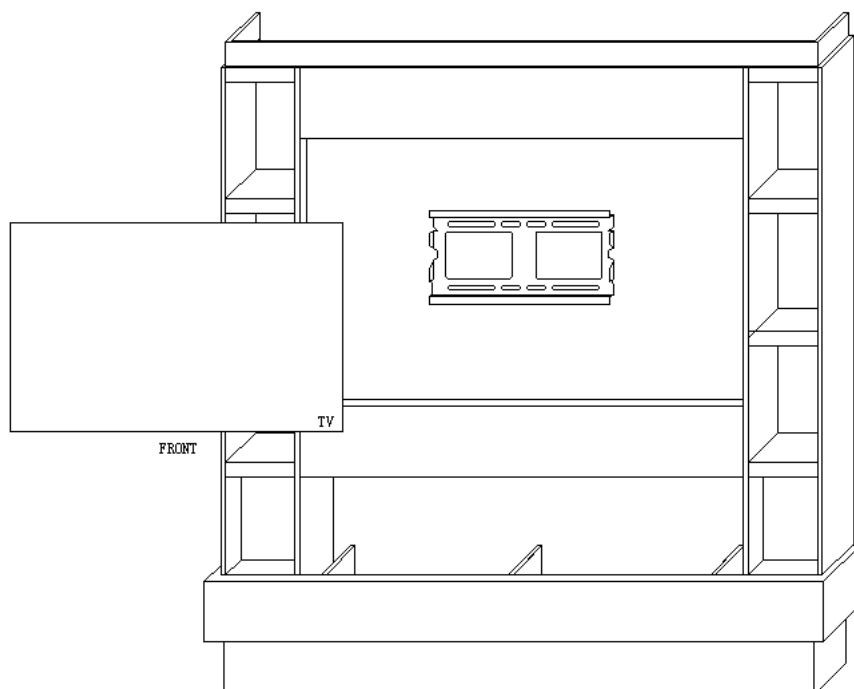

CALL US FOR ASSISTANCE: 0330 0412 270



Step 4: After fixing the two brackets [1,2], use 2 screws [5] to secure the TV in place.

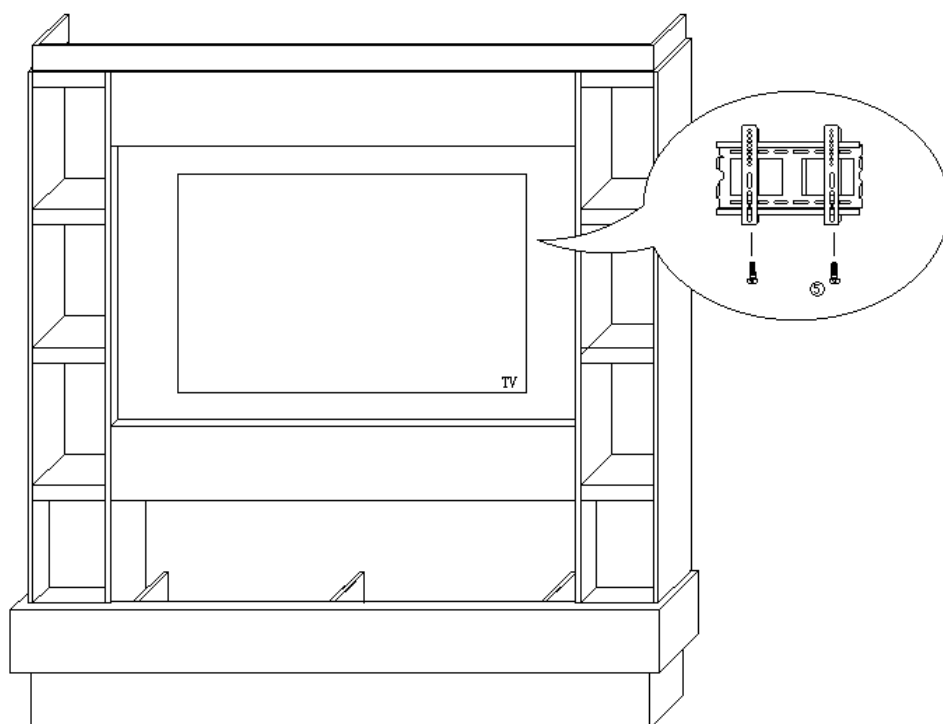

CALL US FOR ASSISTANCE: 0330 0412 270

