USER MANUAL

Thank you for choosing Better Bathrooms.
Please read this manual before installing your product
and keep for future reference.

better bathrooms

General Instruction for Freestanding Baths with Waste and Overflow Fitted



- Two-person assembly
- Tools required
- We always recommend using professional tradespeople to install your product

V1_23.6.26

Congratulations on your purchase

And welcome to our growing gang of savvy shoppers

We're on a mission to bring you extraordinary bathroom products, for less. From modern to traditional style ceramics, plus the gorgeous fixtures, fittings and furniture to match. So, you can fall in love with your space every single day.

As one of the UK's largest independent bathroom stores, we've received countless awards; including the National Business Awards UK, the Digital Entrepreneur Awards and being placed on The Sunday Times Fast Track 100.

We hope your new product goes above and beyond your expectations. However, should any problems occur, please:

- log in to your account and contact our customer services team via your self-serve portal – betterbathrooms.com/CustomerAccount/Login

- contact us via betterbathrooms.com/content/contact-us

Important information

- Please read these instructions thoroughly and retain for future reference
- Always check for pipes and cables before drilling

Receive Your Bath

Unpack and check for damage.

After receiving your bath, please unpack and remove all covering, checking whether there is any damage. Repack the bath if it is not being immediately installed. It will be rejected any claim for damage if not notified in a timely manner.

Protect your bath.

Before commencing and installation, ensure the bath is completely protected, leave covering in place until the bathroom is complete. Scratches and damage incurred during installation are not covered by the warranty.





Contents

- Component Listing
- Technical Drawing
- Tools Required
- Installation Notices
- Installation Instructions
- Maintenance, Care & Cleaning

Component including

1. Bath
2. Waste
3. Waste trap

Tools Required (not supplied)

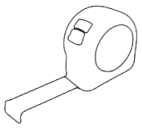 Pencil / Marker	 Tape measure	 Gloves
 Spirit level	 Adjustable wrench	 Silicone

Installation Notices

• Observe all plumbing and building codes in accordance with your area and local requirements.

• All dimensions are nominal! Be sure to measure your basin prior to installation.


• The step-by-step guidelines in the installation instructions are a general reference. Should there be any discrepancies, Better Bathrooms cannot be held liable. It is recommended to install all Better Bathrooms products by hiring a licensed professional.


• Read installation and maintenance instructions thoroughly before installing. Be sure to use proper tools and always wear proper personal safety accessories for your protection.

Installation Instructions


- The waste, overflow and waste trap are pre-fitted inside the bath.




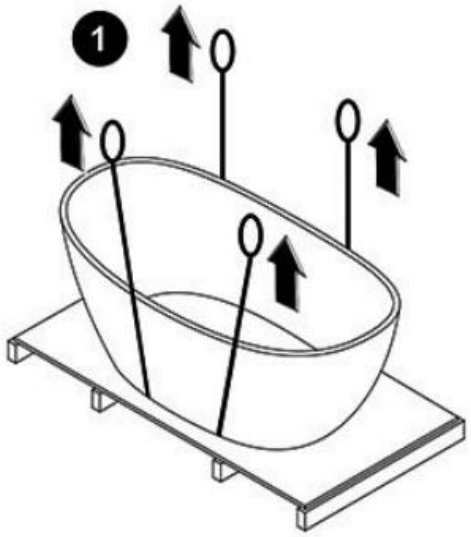

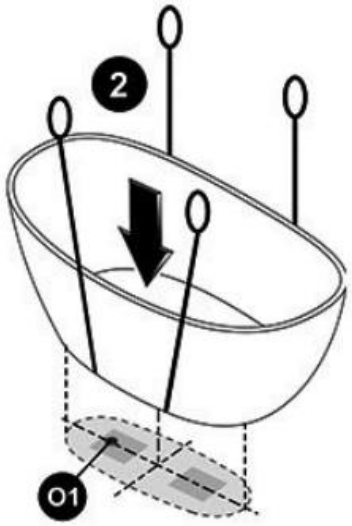


- STEP 1. Place the bathtub in the installation position. Note: When the bathtub is unpacked, it should be handled with care.

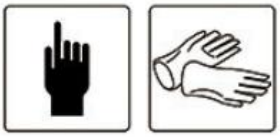

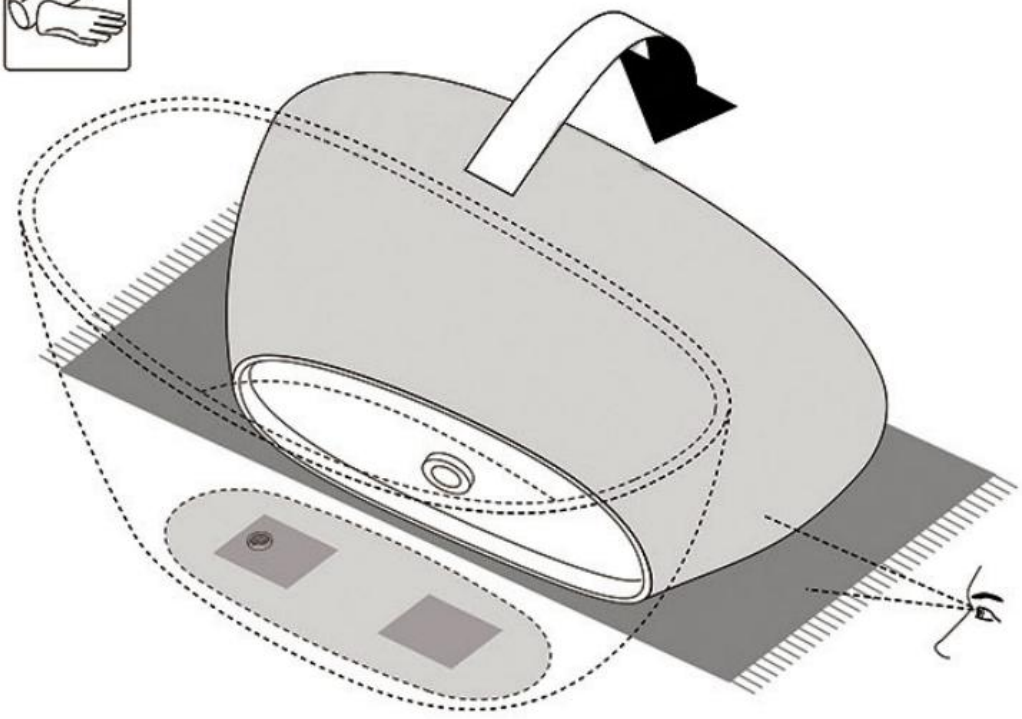


- STEP 2. Put a soft sheet on the floor of the side of bathtub to prevent the bathtub from being scratched.

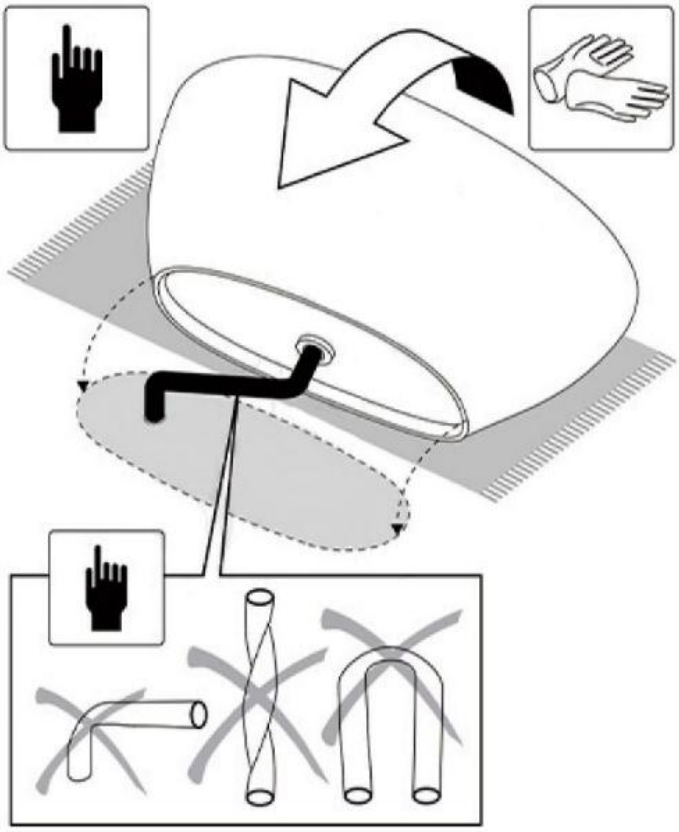

- STEP 3. Insert the drain hose into the floor drain. Be careful not to let it cross or overlap.

Note: After installation, a small amount of water must be put in the bathtub to check whether there is water leaking with drain pipe.

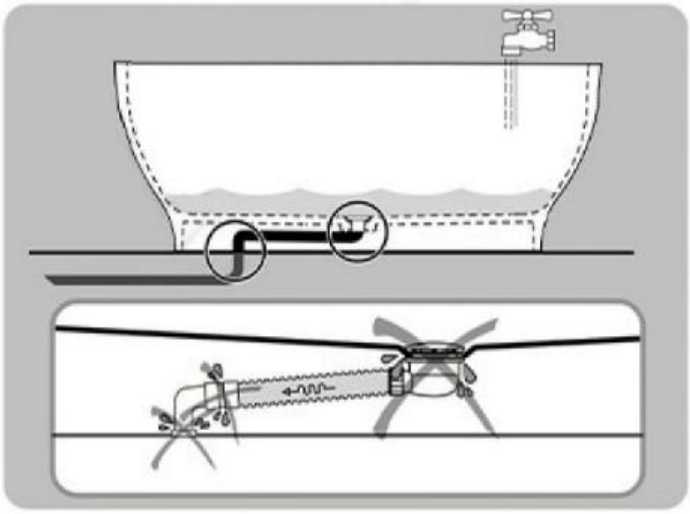

- STEP 4. Put the bathtub right, finished.

Maintenance, Care & Cleaning

1. For regular cleaning of both Glossy or Matte finishes, we recommend using widely available cleaning products.The Matte finish may occasionally require a mildly abrasive product.

2. Wipe surface with a soft cloth after each use.

   To use a mild cleaning product.

   For more stubborn stains, use a mildly abrasive cream cleanser.

3. Stubborn Stains,Scratches, and Damaged Surfaces

To repair/remove stubborn stains, scratches, smudges, and scuffs:

1) Use water to remove dirt and dust from the surface.

2) Use 800 grit sandpaper and sand lightly in small circular motions.

3) FoIIow with 1200 grit sandpaper (finer-grit) sanding lightly in small circular motions until smooth.

4) Dry with a towel.

5) For the Glossy finish, polish the surface with a cloth and a polishing compound for automobiles, such as 3M Extra Cut Compound.

Care Instructions

Wipe surface with a soft cloth after each use.

To use a mild cleaning product.

For more stubborn stains, use a mildly abrasive cream cleanser.